



INSTALLATION

KWB Classicfire

CF1.5 | CF2





Contents

	Foreword	6
	About this manual	6
	Explanation of the Formatting	6
	Legal	6
	Structural measures	7
	Boiler room requirements	8
1	Safety	10
1.1	Please note	10
1.1.1	Grading of the safety instructions	10
1.1.2	General safety instructions	10
1.1.3	Comply with the safety instructions	10
1.1.4	Please read and follow the manual	11
1.1.5	Qualification of the installation personnel	11
1.1.6	Protective equipment of the assembly personnel	11
1.2	Pictograms used	11
1.3	Stickers	14
1.3.1	Stickers on the front part	14
1.3.2	Stickers on the top part	16
1.3.3	Stickers on the rear side	17
1.3.4	Stickers for the storage room	19
1.3.5	Type plate sticker	19
2	Before you begin	20
2.1	Screw connections, dimensions	20
2.2	Bringing in the parts	20
2.2.1	Door width	20
2.2.2	Weights	21
2.2.3	Complicated positioning	21
2.3	Temporary storage	22
2.4	Tools	23
2.5	Placement	23

2.5.1	Dimensions, clearances	23
3	Prepare boiler	25
3.1	Replace hook-in plates of the combustion chamber lining in the CF1.5	25
3.2	Mount the blind cover for the connecting flange	25
3.3	Install the inspection glass slider	26
3.4	Prepare the door and install it	26
3.5	Checking the seal of the doors	27
3.6	Configuring the door	28
4	Mounting the boiler	30
4.1	Placing the basic structure	30
4.2	Attach the corrugated pipes	31
4.3	Mounting the servomotors	32
4.4	Mounting the induced draught fan	33
4.5	Option: Automatic ignition	33
4.6	Installing the automatic heat exchanger cleaning (optional)	34
4.7	Mounting the casing – Part 1	36
4.8	Close the back	40
4.8.1	Installing the power supply plug	41
4.9	Mounting the sensors	41
4.9.1	Safety temperature limit sensor and boiler temperature sensor	41
4.10	Establish the cable connections	42
4.11	Mounting the casing – Part 2	44
4.11.1	Installing the casing door	44
4.11.2	Installing the maintenance cover	46
4.11.3	Installing the control unit	47
4.11.4	Door contact switch	48
4.12	Closing the casing	48
5	Final steps	49
5.1	Affixing the stickers	49
5.2	Bracket for cleaning tools	49
5.3	Completion of Assembly	49



6	Appendix	50
6.1	Dismantling and disposal	50
6.1.1	Dismantling	50
6.1.2	Disposal	50
	Keyword index	55

Foreword

About this manual

This manual contains all the required information for installation by technicians. The chapter sequence corresponds to the recommended workflow. For further queries please contact your sales partner or KWB Customer Service.

KWB – Kraft und Wärme aus Biomasse GmbH including its country representatives and authorised competence partners are hereinafter referred to as KWB.

Our objective is to constantly improve our products and manuals – we would appreciate your comments and suggestions.

You can find all contact data on the KWB home page www.kwb.net.

If you find any errors or mistakes, please let us know at: doku@kwb.at

Original manual – Subject to change. No responsibility accepted for errors and omissions!

Explanation of the Formatting

Work steps

We use different symbols for the preconditions, the actual work steps and the result:

↘ Precondition

→ Work step

↳ Result

Page texts

The keywords to the left of the text column assist you in immediately detecting the content of the text paragraph.

Cross references

A reference to another section of this document can be recognized with an arrow and the page number in brackets. Example: **About this manual [► 6]**

Legal

Intellectual Property

© 2021 KWB – Kraft und Wärme aus Biomasse GmbH

All catalogues, brochures, diagrams, drawings, manuals and control and adjustment programmes etc. are protected as intangible property and always remain the intellectual property of KWB. Any use, reproduction, distribution, publication, processing and/or other transfer to third parties requires the prior written consent of KWB.

When operating the contractual goods, the installation, operating and other technical regulations and instructions from KWB must be strictly observed and adhered to.

NOTE

Warranty

- The manufacturer's KWB warranty specifies proper installation and commissioning of the system as a prerequisite. Defects and damage due to improper installation, commissioning and operation are excluded from the warranty!
- The manufacturer's instructions must be complied with to ensure proper system function. Knowledge of the manuals is a prerequisite.
- Use only original parts or parts that have been expressly approved by the manufacturer.
- If something is not clear, please look it up in this manual or contact the KWB customer service.

Liability / Warranty

Any change and / or modification of the contractual goods or in the operation of the contractual goods not expressly authorised by KWB in writing or their operation in conjunction with other devices or accessories the compatibility of which has not been expressly confirmed by KWB, any inappropriate operation/use (e.g. the use of fuels and/or water not in accordance with standards which do not correspond to VDI 2035 or ÖNORM H 5195-1; inappropriate and / or excessive use) leads to the exclusion of the warranty. Any liability or warranty for compatibility of the contractual goods with other products, systems, plants or parts, as well as the suitability thereof for a specific use shall be excluded unless expressly permitted in writing.

Intended use

KWB boilers heat water for central heating systems. The application, operation, maintenance and repair of KWB systems must, without exception, be performed as described in the instructions.

KWB dust filter separate dust.

Only the fuels specified in the Operating instructions in Section Intended fuels may be used without exception.

Any other use shall be deemed IMPROPER. The responsibility for the resultant damage shall lie with those who operate and use the system!

Structural measures

NOTE

Establishing the constructional requirements

- Compliance with the locally applicable regulations, and proper execution of the structural measures lies solely within the system owner's sphere of responsibility and is a prerequisite for the guarantee and warranty requirement.
KWB does not accept any liability, nor does it offer any warranties for any type of constructional measures.
- Comply with all locally applicable, legal, submission, construction and implementation regulations when creating the structural requirements! In addition, comply with KWB installation guidelines!
- Without laying claim to an exhaustive treatment of the issue at hand and without suspension of any conditions imposed by the authorities, we recommend the Austrian preventative fire protection directive TRVB H118 and the ÖKL technical bulletin No. 56 and No. 66 in the applicable version.

Boiler room requirements

Floor:

- Concrete, bare or tiled
- Even, horizontal
- Dry
- Able to carry max. load
- Non-flammable (Flammability classification A1 pursuant to EN 13501)

Customer-provided fire protection

Building part	Fire protection design according to EN 13501
Floor, walls	fire resistant: REI 90
Bearing walls, floors, roofs	fire resistant: REI 90
Horizontal supports and other supports	R 90
Boiler room door	fire retardant: EI ₂ 30 c opening in escape direction, closing automatically
Connecting door to the fuel storage room	fire retardant: EI ₂ 30 c; closing automatically
Heating room windows	fire retardant: E 30; not to be opened

Fire extinguisher

Lighting, electrical system

- NO storage of flammable agents in the boiler room.
- NO direct connection to rooms in which flammable gases or liquids are stored (Garage, storeroom etc).
- Place a portable fire extinguisher of the specified size (at least 6 kg fill weight EN 3) outside of the boiler room next to the boiler room door.
- Make sure that permanently installed lighting and an electrical supply line to the heating system are available.
- Place the light switch at an easily accessible location outside the boiler room next to the boiler room door.
- Leave sufficient reserve cable in the boiler room in case you wish to connect the boiler with other bus participants.

Ventilation

- Two air vents must be installed; one close to the ground and one close to the ceiling; the air intake opening must lead directly into the open. If other rooms must be crossed to do this, this air duct must have an envelope according to EI 90 (EN 13501)!
- The size of the non-closing opening is dependent on the rated power of the heating system: Calculate the opening with 5 cm² per kW, but no less than 400 cm².
- Fit a protective grille with a non-flammable mesh width < 5 mm on the outside of ventilation openings into the open.
- When installing the openings and air ducts, you must ensure that no outside and weather-related influences (leaves, snow, ...) impair the air flow.
- Do not use any chlorine-containing cleaning or operating agents (e.g. chlorine gas plant for swimming pools) or hydrogen halides in the boiler room.
- Keep all boiler air intake openings free of dust.
- If not specified otherwise in the applicable provisions regarding the structural equipment of the boiler room, the following standards apply for the design and dimensioning of the air ducts:

Note on standards:

ÖNORM H 5170 – Construction and fire-protection requirements

Frost protection Room temperature

- Provide frost protection for all water lines and district heating pipes.
- Ensure a minimum temperature of 10°C in the boiler room as stipulated in EN 12831. Lower temperatures change the lubricating characteristics to an extent that the reliable operation of the drive aggregates would no longer be ensured.






- Ensure a maximum temperature of 40 °C.
- Safety**
- Do not store flammable materials in the boiler room. Avoid direct connections to rooms in which flammable gases or liquids (e.g. parking garage) are stored.
 - No flammable items must be placed on the boiler for drying purposes (e.g. clothing, ...).
- Protection against rodents and other animals**
- The system must be protected against damage from and nesting of animals (rodents, ...).
- Sea level**
- Please contact the manufacturer if the boiler is to be installed at more than 2000 metres above sea level.

1 Safety

1.1 Please note

1.1.1 Grading of the safety instructions

In this documentation, warnings with the following hazard levels are used to indicate direct dangers and important safety regulations:

NOTE	General information We use this display to indicate and describe important information .
 CAUTION	Beginning hazard We use this display to indicate and describe beginning hazards . If these stated hazards are not observed, injuries, property damage and environmental damage can occur.
 WARNING	Medium hazard We use this display to indicate and describe hazards. If this warning is not observed, severe or fatal injuries can occur.
 DANGER	Serious hazard We use this display to indicate and describe hazards . If this warning is not observed, severe or fatal injuries occur!

1.1.2 General safety instructions

- **Do not alter the system in any way!**
- Close all provided covers before you place the system into operation!
- Unplug the connector before you perform any service or open the control!
- Always disconnect the power supply to the boiler and conveyor system (main switch) before you enter the fuel storage room.

NOTE	Proper installation by specialists <ul style="list-style-type: none"> ➤ The entire installation, integration and commissioning of the heating system may only be carried out by expert specialists of KWB or their partners. → All the work must conform to the specifications stated in the KWB manuals and local regulations.
-------------	--

1.1.3 Comply with the safety instructions

NOTE	Please comply with the safety instructions Your system has been tested for safety and it satisfies the applicable standards, directives and regulations. Failure to comply with the safety instructions or improper use poses danger of material damage. In addition, failure to comply with the safety instructions or improper use also poses a life-threatening hazard!
-------------	---

1.1.4 Please read and follow the manual

NOTE

Please read the instructions carefully before installation or commissioning!

Compliance with the instructions and proper installation or commissioning is a prerequisite for a warranty provided by KWB.

- If you are unsure about anything, please refer to the instructions or contact the KWB customer service.
- You will find all instructions for our heating systems in the KWB PartnerNet: <http://partnet.kwb.net/>

1.1.5 Qualification of the installation personnel



CAUTION

Assembly and installation by unqualified personnel may lead to material damage and injuries!

- The following applies for assembly and installation:
 - Comply with the directions and notes in the instructions.
 - Have the work on the system only carried out by personnel with appropriate technical skills.



Assembly, installation, commissioning and maintenance must only be carried out by qualified persons:

- Heating engineers / building services engineers
- Electrical installation engineer
- KWB Customer Service

The installation personnel must have read and understood the directions in the documentation.

1.1.6 Protective equipment of the assembly personnel

To the extent necessary or required by regulations, personal protective equipment must be used. Such obligations may also refer to the use of hazardous materials, for example, or the wearing of personal protective equipment.

























During transport, installation and assembly:








- Suitable work clothes
- Protective gloves
- Safety footwear (at least protection class S1P)

1.2 Pictograms used

The following command, prohibition and warning signs are used in the documentation and/or at the boiler.

According to the Machine Directive, signs attached directly at the danger location of the boiler warn of direct dangers or signal safety-relevant behaviours. These stickers must not be removed or covered up.

Command sign (safety colour blue)			
	General command signs		Use mask
	Follow instructions		Use welding mask
	Use hearing protection		Before maintenance and repair disconnect from mains
	Use eye protection		Check barrier
	Earth before use		Keep closed
	Disconnect plug from the mains!		Use gas detector
	Use foot protection		Continuous ventilation to the outside is required
	Use hand protection		Ventilation required
	Use protective clothing		Entry only with a second person on the outside! In the event of an accident first call for help!
	Use face guard		Only certified technicians
	Use head protection		Only certified electricians

Prohibition sign (safety colour red)			
	General prohibition signs		No access for persons with pace-makers or implanted defibrillators
	Unauthorized access prohibited		Reaching in prohibited
	Smoking is prohibited		Stepping on the surface is prohibited
	No open flames; Fire, open ignition sources and smoking are prohibited		

Warning signs (safety colour yellow)			
	General warning sign		Warning of automatic start-up
	Warning of explosive substances		Warning of danger of crushing
	Warning of obstructions on the ground		Warning of flammable substances
	Warning of danger of falling		Warning of sharp object
	Warning of low temperature / frost		Warning of hand injuries
	Warning of danger of slipping		Warning of rollers running in opposite direction
	Warning of electrical voltage		Warning of optical radiation
	Warning of suspended load		Warning of flammable materials
	Warning of hot surface		Warning of suffocation risk

1.3 Stickers

NOTE

Hazard due to missing safety sticker


- ↳ Safety stickers save lives! They protect you against injuries and prevent damage to property and equipment!
- Ensure the correct use of the heating system: Attach ALL stickers as indicated in the instructions!
- Give the unused stickers to the operator of the heating system and instruct the operator regarding the possible hazards and/or consequences!
- Order any missing or incorrect stickers from KWB.

- Attach the KWB Logo to the front casing.
- Using the template, affix the correct lettering (depending on boiler type: Classicfire or Com-bifire) to the front casing.
- Affix the stickers.

27-2000222 – Languages: DE | EN | FR

27-2000223 – Languages: ES | IT | SL

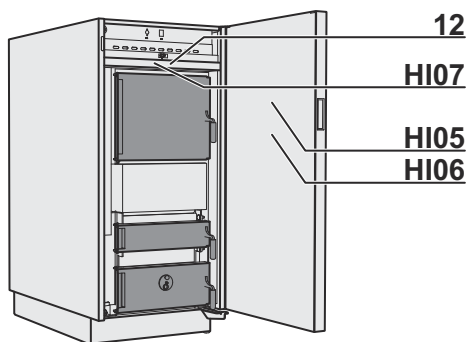

1.3.1 Stickers on the front part



- Attach the two large stickers to the inside of the casing door.

HI05

!

Asche entleeren / Empty ash / Vider les cendres

- » Asche aus dem Füllraum/Brennraum entfernen. Vor jedem zehnten Anheizen durchführen. / Remove ash from the fill room/combustion chamber. To be done before every tenth heat-up. / Éliminer la cendre de la chambre de remplissage/de combustion. À effectuer avant chaque dixième allumage.

Wichtig / Important / Important:




- » Asche oberhalb des Wannensteins [7] entfernen. / Remove ash above the tank block [7]. / Éliminer les cendres au-dessus du bloc de cuve [7].
- » Asche [8] (hinten) mit Aschekratzer entfernen. / Remove ash [8] (in the rear) with the ash scraper. / Éliminer les cendres [8] (à l'arrière) à l'aide du grattoir à cendres.

Befüllung mit Stückholz / Filling with log wood / Remplissage de bois en bûches

- » Vorgegebene Füllmenge im Menü *Nachlegen* überprüfen. / Check the prescribed filling amount in the *Refill* menu. / Contrôler la quantité de remplissage définie dans le menu *Recharge*.
- » Füll- & Anheiztür öffnen. / Open fill & heat-up door. / Ouvrir la porte de remplissage et d'allumage.

- 1: Eine Lage Stückholz in den Füllraum legen. Größere Zwischenräume erleichtern das Anheizen. / Put a layer of log wood into the fill room. Larger spaces in between make igniting it easier. / Placer une couche de bûches en bois dans la chambre de remplissage. Des espaces plus ou moins grands facilitent l'allumage.
- 2: Papier vor dem Zündrohr platzieren [Z]. / Place paper in front of the ignition pipe [Z]. / Placer du papier devant le conduit d'allumage [Z].
- 3: Kleineres, leicht entflammables Holz auf die erste Lage Stückholz legen. / Put a small, easily lit piece of wood on the first log-wood layer. / Poser du petit bois facilement inflammable sur la première couche de bûches.
- 4: Papier großflächig über die erste Lage Stückholz legen. / Place paper over a large surface of the first log-wood layer. / Poser du papier sur une surface étendue, sur la première couche de bûches.

- » Füllraum füllen (siehe Regelung - 0 bis 3/3). / Filling the fill room (see Control - 0 to 3/3). / Remplir la chambre de remplissage (voir commande - 0 à 3/3).

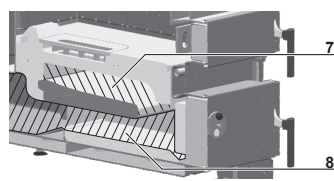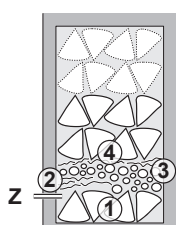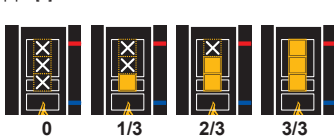





HI05

Emptying ash and filling

HI06

!

Automatische Zündung / Automatic ignition / Allumage automatique

- » Kesseltüren schließen / Close boiler doors / Fermer les portes de la chaudière
- » Zündprogramm wählen / Select ignition program / Sélectionner le programme d'allumage

Anforderung: / Request: / Demande :

Zündung erfolgt mit der nächsten Wärmeanforderung (empfohlen)
Ignition should take place during the next heat request (recommended)
L'allumage a lieu à la prochaine demande de chaleur (recommandé)

Zeitprogramm: / Time program: / Plages horaires :

Zündung erfolgt nach Ablauf einer Wärmeanforderung / Ignition takes place after expiry of a heat request / L'allumage a lieu après expiration d'une demande de chaleur

Sofort: / Immediately: / Immédiatement :

Zündung erfolgt sofort / Ignition takes place immediately / L'allumage a lieu immédiatement

Aus: / Off: / Off :

Keine automatische Zündung (händisch zünden) / No automatic ignition (manual ignition) / Aucun allumage automatique (allumage manuel)

Händisch zünden / Manual ignition / Allumage manuel


- » Papier entzünden / Ignite paper / Allumer le papier
- » Mittlere Kesseltür so lange geöffnet lassen, bis das Holz knistert.
Leave middle boiler door open until you hear the wood crackling.
Laisser la porte centrale de la chaudière ouverte jusqu'à ce que le bois crépite.
- » Türen schließen / Close doors / Fermer les portes

HI06

Ignition

→ Attach the warning *Keep doors closed* onto the crossbar below the door contact switch.


Keep doors
closed
(12)




Keep all doors closed during operation!

12


**Check tightness
(HI07)**

	Check door tightness after 100 operating hours! Follow the instructions!
---	--

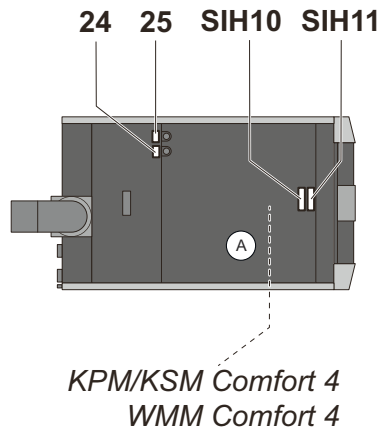
1.3.2 Stickers on the top part

Attach the following stickers to the casing:

**Inlet, thermal
discharge safety
valve
(24)**

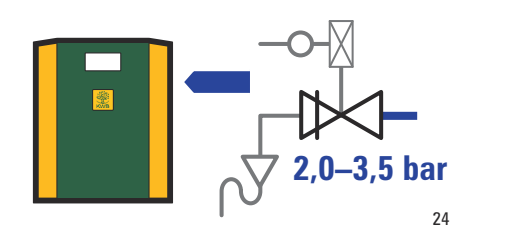	Inlet, thermal discharge safety valve The thermal discharge safety valve presupposes a cold-water pressure of 2–3.5 bar!
--	--

**Outlet, thermal
discharge safety
valve
(25)**

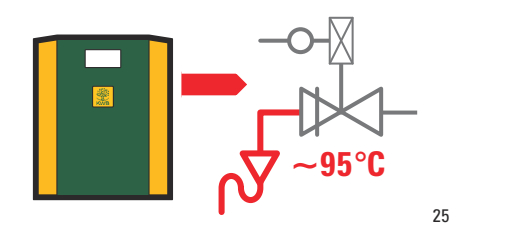	Outlet, thermal discharge safety valve The thermal discharge safety valve triggers at a boiler temperature of 95 °C!
---	--

Affix the sticker with the plug assignment of the KWB Comfort 4 to the inside of the control cabinet cover plate [A] so it is clearly visible:

**Stecker Kessel-Power-Modul [KPM]
Plug, boiler power module [KPM]
Fiche module d'alimentation de chaudière [KPM]**

	Versorgung 230/400 V _{AC} / Power supply 230/400 V _{AC} / Alimentation 230/400 V _{CA}
100	Abgehende Versorgung Zusatzplatine / Outgoing power supply additional board / Sortie alimentation carte supplémentaire
101	Zündstab Gebläse Stückholz / Ignition rod fan log wood / Barre d'allumage ventilateur bois en bûches
106	Zündstab Heizung / Ignition rod heating system / Barre d'allumage chauffage
107	STB / STL / STB
111	Wärmetauscher-Reinigung (Pin 1-2-3) & Saugzug (Pin 4-5-6) / Heat exchanger cleaning (pin 1-2-3) & Induced draught (pin 4-5-6) / Nettoyage de l'échangeur thermique (broches 1-2-3) et tirage (broches 4-5-6)
120	Mischer RLA / Mixer return flow boost / Mélange, MTR
121	Kessel- od. Pufferladepumpe / Boiler or buffer charging pump / Pompe d'alimentation de chaudière ou de ballon tampon
122	Schnell-Ladeventil Puffer 0 / Quick-charge valve Buffer 0 / Vanne de charge rapide Ballon tampon 0
123	Zubringer- od. Ladepumpe Puffer 0 / Supply or charge pump Buffer 0 / Pompe d'alimentation ou de charge ballon tampon 0
124	Multifunktionsausgang 3 / Multi-function output 3 / Sortie multifonctions 3
125	Multifunktionsausgang 1 / Multi-function output 1 / Sortie multifonctions 1
128	Reserve Sicherheits-Eingang, z.B. Wassermangel- Sicherung / Reserve safety input, e.g. low water pressure switch / Entrée de sécurité de réserve, par ex. sécurité manque d'eau

129	Not-Halt (bei reinem Stückholzbetrieb gebügelt) / Emergency stop (bridged for pure log wood operation) / Arrêt d'urgence (shunté en cas de mode bois en bûches exclusif)
130	Schalter Aschebehälter entfernt (Pin 1-3) (Muss bei CF2 gebügelt bleiben!) / Ash container switch removed (pin 1-3) (Must remain bridged in CF2!) / Commutateur bac à cendres retiré (broches 1-3) (doit rester shunté avec CF2 !)
131	Sensor Überfüllschutz-Deckel Förderkanal (Muss bei EF2 und CF2 gebügelt bleiben!) / Sensor, overflow protection cover conveyor channel (Must remain bridged in EF2 and CF2!) / Capteur couvercle de protection de trop-plein conduite d'alimentation (doit rester shunté avec EF2 et CF2 !)
132	TÜB Lagerraum (gebügelt oder verwendet) / TMFS storage room (bridged or used) / CTC local de stockage (shuntée ou utilisée)
133	Reserve Sicherheits-Eingang / Reserve safety input / Entrée de sécurité de réserve
134	Hausbus [OUT] / House bus [OUT] / Bus domestique [OUT]
135	Kesselbus [OUT] / Boiler bus [OUT] / Bus chaudière [OUT]
136	Abgehende Busverbindung Zusatzplatine / Outgoing bus connection additional board / Sortie liaison bus carte supplémentaire
137	Kessel BGE 24 V _{DC} / Boiler BGE 24 V _{DC} / Chaudière MCE 24 V _{DC}
Stecker Kessel-Signal-Modul [KSM] Plug, boiler signal module [KSM] Fiche module de signaux de la chaudière [KSM]	
200	Lambdasonde / Lambda probe / Sonde lambda
205	Türkontakt / Door contact / Contact de porte
211	Saugzug Drehzahl (Pin 4-5-6) / Induced draught fan speed (pin 4-5-6) / Vitesse du tirage (broches 4-5-6)

213	Primär-Luftklappe: AUF/ZU (Pin 1-5-9) / Position (Pin 3-7-11). Sekundär-Luftklappe: AUF/ZU (Pin 2-6-10) / Position (Pin 4-8-12). Primary air shutter: OPEN/CLOSED (pin 1-5-9) / position (pin 3-7-11). Secondary air shutter: OPEN/CLOSED (pin 2-6-10) / position (pin 4-8-12). Clapet d'air primaire : OUVERT/FERMÉ (broches 1-5-9) et position (broches 3-7-11). Clapet d'air secondaire : OUVERT/FERMÉ (broches 2-6-10) / position (broches 4-8-12).
217	Rücklauf-Temp. / Return flow temp. / Temp. de retour
218	Kesselvorlauf-Temp. / Boiler forward flow temp. / Temp. de départ de la chaudière
220	Flamm-Temp. / Flame temp. / Temp. flamme
230	Freigabe Verbrennung (Ext. 1) / Release combustion (ext.1) / Activation combustion (Ext. 1)
235	Kesselpumpe PWM 1 / Boiler pump PWM 1 / MLI pompe de la chaudière 1
237	Außen-Temp. / Outside temp. / Temp. extérieure
238	Puffer-Temp. 1 / Buffer temp. 1 / Temp. ballon tampon 1
239	Puffer-Temp. 2 / Buffer temp. 2 / Temp. ballon tampon 2
240	Puffer-Temp. 3 / Buffer temp. 3 / Temp. ballon tampon 3
241	Puffer-Temp. 4 / Buffer temp. 4 / Temp. ballon tampon 4
242	Puffer-Temp. 5 / Buffer temp. 5 / Temp. ballon tampon 5
243	Versorgung 24 V _{DC} GSM-Modul / Power supply 24 V _{DC} GSM module / Alimentation 24 V _{DC} module GSM
247	Kesselbus [IN] KPM #135 / Boiler bus [IN] KPM #135 / Bus chaudière [IN] KPM #135
248	Kesselbus [OUT] / Boiler bus [OUT] / Bus chaudière [OUT]
250	RS232 GSM-Modul / RS232 GSM module / Module GSM RS232

xxx ... Interne Anschlüsse / internal connections /
Raccordements internes
xxxx ... Externe Anschlüsse / external connections /
Raccordements externes

KPM/KSM CF2

Plug list KPM/KSM - KWB Comfort 4 (symbol display)**Stecker Wärmemanagement-Modul [WMM]
Plug, heat management module [WMM]
Connecteur module de gestion thermique [WMM]**

300	Versorgung 230 V _{AC} / Supply 230 V _{AC} / Alimentation 230 V _{CA}
301	Pumpe/Ventil Zweitwärmequelle / Pump/valve for secondary heating source / Pompe/vanne seconde source de chaleur
302	Solarpumpe 2 / Umschaltventil / Solar pump 2 / switchover valve / Pompe solaire 2/vanne de commutation
303	Solarpumpe / Solar pump / Pompe solaire
304	Zirkulationspumpe / Circulation pump / Pompe de circulation
305	Brauchwasserpumpe / DHW pump / Pompe du chauffe-eau
306	Zubringer- od. Pufferladepumpe / Supply or buffer charging pump / Pompe d'alimentation ou de charge
307	Mischer HK 2 / Mixer HC 2 / Mélangeur CC 2
308	Pumpe HK 2 / Pump HC 2 / Pompe CC 2
309	Mischer HK 1 / Mixer HC 1 / Mélangeur CC 1
310	Pumpe HK 1 / Pump HC 1 / Pompe CC 1
311	Anforderung Zweitwärmequelle / Secondary heating source request / Demande seconde source de chaleur
320	Zirkulation Taster / Circulation, push button / Touche circulation
322	Freigabe HK 1 / Release HC 1 / Activation CC 1
323	Freigabe HK 2 / Release HC 2 / Activation CC 2
327	Temp. Außen / Temp. outside / Temp. extérieur

328	Temp. Brauchwasserspeicher 1 / Temp. DHWC 1 / Temp. chauffe-eau 1
329	Temp. Zirkulation / Temp. circulation / Temp. circulation
330	Temp. Puffer 1 / Temp. buffer 1 / Temp. ballon tampon 1
331	Temp. Puffer 2 / Temp. buffer 2 / Temp. ballon tampon 2
332	Temp. Puffer 3 / Temp. buffer 3 / Temp. ballon tampon 3
333	Temp. Puffer 4 / Temp. buffer 4 / Temp. ballon tampon 4
334	Temp. Puffer 5 / Temp. buffer 5 / Temp. ballon tampon 5
335	Temp. Raum HK 1 analog / Temp. room HC 1 analogue / Temp. ambiante CC 1 analogique
336	Temp. Raum HK 2 analog / Temp. room HC 2 analogue / Temp. ambiante CC 2 analogique
337	Temp. Vorlauf HK 1 / Temp. forward flow HC 1 / Temp. départ CC 1
338	Temp. Vorlauf HK 2 / Temp. forward flow HC 2 / Temp. départ CC 2
339	Temp. Kollektor / Temp. collector / Temp. capteur
340	Temp. Vorlauf Solar / Temp. forward flow solar / Temp. départ solaire
341	Temp. Brauchwasserspeicher 2 / Temp. DHWC 2 / Temp. chauffe-eau 2
342	Temp. Zweitwärmequelle / Temp. secondary heating source / Temp. seconde source de chaleur
345	Solar Durchfluss- & Temperatursensor (Vortex) / Capteur de température et de débit solaire (Vortex)


349	Solar PWM Signal Pumpe 1 / Solar PWM signal pump 1 / Signal MLI solaire pompe 1
350	Solar PWM Signal Pumpe 2 / Solar PWM signal pump 2 / Signal MLI solaire pompe 2
360	Hausbus [IN] – bleibt frei, wenn im Kessel verbaut / House bus [IN] – remains open if installed in the boiler / Bus domestique [IN] – reste libre si monté dans la chaudière
361	Hausbus [OUT] – Terminiert (120 Ω) ausgeliefert. Bei Bus-Weiterführung entfernen! / House bus [OUT] – delivered terminated (120 Ω). Remove in case of bus extension! / Bus domestique [OUT] – livré avec terminaison (120 Ω). Retirer en cas de continuation du bus !
362	Bediengerät 1 / Control unit 1 / Module de commande 1
363	Bediengerät 2 – gebügelt ausgeliefert / Control unit 2 – is delivered bridged / Module de commande 2 – livré shunté
364	Bediengerät 3 – direkt im Multifunktionsgehäuse! / Control unit 3 – directly in the multi-function enclosure! / Module de commande 3 – directement dans le boîtier multifonctions !
365	Verbindung zur LED-Reihe / Connection to the LED row / Connexion à la rangée de LED
366	Eingehende Busverbindung vom KPM (#136) / Incoming bus connection from KPM (#136) / Liaison bus entrante en provenance du KPM (#136)
367	RS232-Schnittstelle / RS232 interface / Interface RS232
368	Versorgung 24 V _{DC} / Supply 24 V _{DC} / Alimentation 24 V _{DC}

WMM CF2±

Plug list WMM - KWB Comfort 4 (symbol display)

1.3.3 Stickers on the rear side

Attach the following stickers to the casing:

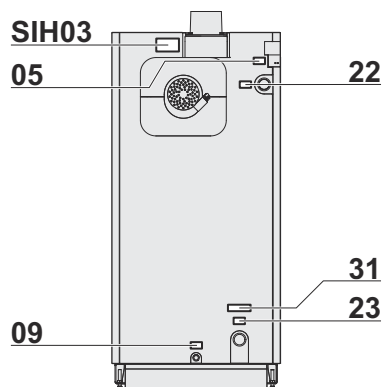

(SIH03)

	<p>Note regarding exhaust pipe and chimney connection:</p> <p>Must be leak-tight and rising!</p> <p>Must be built according to DIN 18160/2!</p> <p>Follow the instructions!</p>
<p>Forward flow (22)</p> <p>22</p>	<p>Forward flow</p>
<p>Power supply (05)</p> <p>230 V_{AC} 13 A C</p> <p>05</p>	<p>Power supply</p>
<p>Return flow boost (31)</p> <p>31</p>	<p>Observe information regarding the return flow boost!</p> <p>Follow the instructions!</p>
<p>Filling and emptying (09)</p> <p>09</p>	<p>Filling and emptying</p>
<p>Return flow (23)</p> <p>23</p>	<p>Return flow</p>

1.3.4 Stickers for the storage room

→ Always ensure that the storage room warnings are attached to the door of the storage room!

(SIH04)

The SIH04 sticker features a yellow warning triangle at the top. Below it are three circular icons: a hand with a flame (no open flames), a hand with a lit match (no smoking), and a person reading a document (follow instructions). The text 'SIH04' is in the bottom right corner.

Sticker storage room log wood!

Sticker on the door to the log wood storage room (example representation)

Unauthorised persons are not allowed beyond this point! Lock the door! Keep children away!

No smoking, no fire or ignition sources of any type!

Follow the instructions!

This bilingual sticker for fuel storage rooms contains detailed safety instructions in German and English. It includes icons for fire, no smoking, and ventilation. The text covers entry rules, fire safety, ventilation requirements, and CO concentration warnings.

Sticker storage room pellets

Stickers on the door to the pellet storage room (example representation)

1.3.5 Type plate sticker

<p>Kraft und Wärme aus Biomasse GmbH A-8321 St. Margarethen/Raab, Industriestraße 235</p>	
Type Fuel extractor	KWB Powerfire type TDS 300 with E-Filter
SN Year	000-1234567/0 2020
Fuel	wood pellets C1 (EN 303-5), A1 (ISO 17225-2)
Rated thermal output (RTO)	300,0 kW
min. thermal output	73,5 kW
Fuel thermal output at RTO	317,8 kW
max. operating pressure	3,5 bar
max. operating temperature	90 °C
Permitted temperature	95 °C
Water content	610,0 Ltr
Max. allowed power input	5100 W
Electrical connection	3+N 400 VAC 50Hz 16 A
Test standard boiler class	EN 303-5 5
CO at rated power	34 mg/m³ (13% O₂)
Dust at rated power	9,7 mg/m³ (13% O₂)
VKF-NR	18889

Type plate example

You will find the type plate with the instructions attached to one of the cover sheets.

→ Attach the type plate to the boiler casing in a **visible location**.

This sticker is absolutely required for the operating permit!

2 Before you begin

2.1 Screw connections, dimensions

Take the following information into account during the entire assembly process:

Information on screw connections

Generally, we use hexagonal nuts with flange for fastening. You can also first use a washer, then a lock washer and then a nut.

Information on dimensions

All dimensions are provided in millimetre (mm) unless specified otherwise.

2.2 Bringing in the parts

The basic structure (combustion chamber, heat exchanger and combustion room module) is delivered pre-assembled on a palette.

- Avoid damage caused by strong vibrations and shocks:
The refractory bricks might fracture!
- Handle the packing units with care:
The casing parts are easily scratched!

2.2.1 Door width

The following door widths are required to move a KWB Classicfire into the room:

Unobstructed door width

KWB Classicfire 18-38 kW		
Door width at least	Without casing, pre-assembled	71.5 cm
	Without casing, dismantled	70 cm
	With casing and cleaning lever	80 cm
Door height at least	Always	180 cm

2.2.2 Weights



WARNING

Fatal crushing (pulled muscles) caused by heavy components! Inappropriate lifting/transporting can lead to fatal injury and serious damage to the equipment.

- **Only trained staff** may lift/transport heavy components!
- **Keep the component weight in mind – handle accordingly:**
 - Verify transport securing devices BEFORE lifting / transporting!
 - Keep the centre of gravity in mind - always secure components to prevent slipping and tilting!
 - Select stable bases, suitable tools and assistance from staff!
 - Lift with your back straight, NOT too heavy.
 - Use your personal protection equipment[PSA].
 - In difficult areas ensure that people and system are safe!

Components with a weight of more than 25 kg



KWB Classicfire 18-38 kW	Weight type CF1.5	Weight type CF2
Fill room module	224 kg	221 kg
Heat exchanger module	108 kg	108 kg
Combustion room module	273 kg	273 kg

The total weight of the KWB Classicfire type CF1.5 is 722 kg.

The total weight of the KWB Classicfire type CF2.0 is 719 kg.

2.2.3 Complicated positioning

The KWB Classicfire is delivered on several palettes and can be lifted from the palette with a lifting truck with the help of formwork panels or at least 3 lifting jacks.

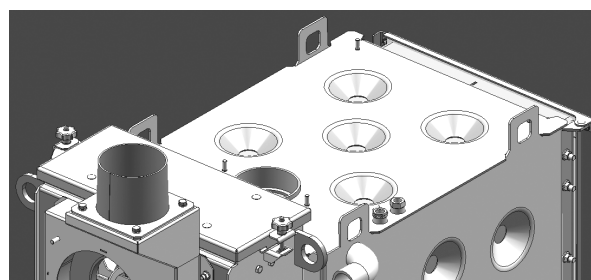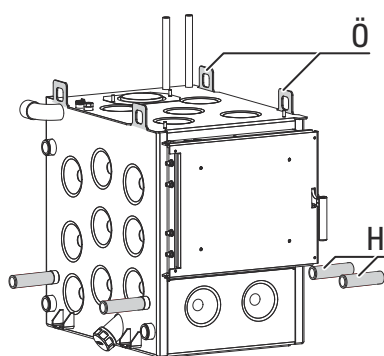

Ö Hoisting lug


H Lifting aid (Not included in the scope of delivery)

Crane


The boiler is prepared for being transported into the room with the help of a crane. The basic structure has 6 lifting lugs: 4 lugs at the combustion chamber and 2 more lugs at the heat exchanger.

The basic structure can be dismantled if it is NOT possible to move the basic structure consisting of fill area, heat exchanger, combustion chamber module into the boiler room (too heavy, too wide, too high ...).

Disassemble the suction channel

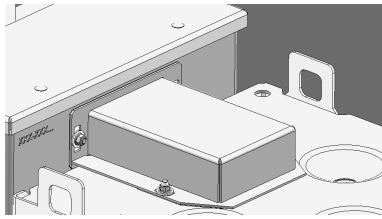

- Remove the 2 screws at the rear (2x M8) to the heat exchanger module.
- Remove the 2 screws (2x M8) to the fill room module.
- Remove the suction channel.

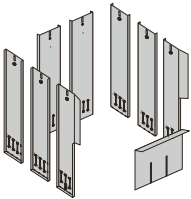


Remove the combustion chamber lining

- Remove the cable ties at the doors.
- Open the fill room door and remove all combustion chamber lining parts.

Tip: Insert a screw driver into the opening under the hook, lift the plates up and unhook them.

Separate the modules

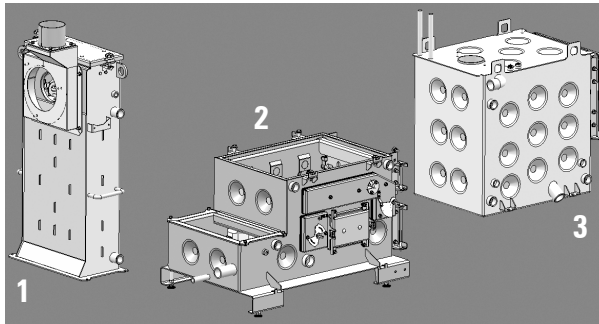

1	Heat exchanger module	2	Combustion room module	3	Fill room module
---	-----------------------	---	------------------------	---	------------------

- Remove the screw connections between the combustion chamber module (2) and heat exchanger module (1) (4x M8x20 + nut).



WARNING

Fatal injuries from heavy components!

- Use appropriate hoisting equipment. Keep the centre of gravity in mind.
- Make sure to secure components against sliding and tipping!

- Lift the heat exchanger module (1) off the combustion room module (2).
- Remove the screw connections between the combustion chamber module (2) and fill room module (3) (4x M10x45 + nut + 2 washers each).
- Lift the fill room module (3) off the combustion room module (2). For this, use the four optional available pipes as lifting aids (can be ordered from KWB using article number 18-1010090)!

Assembly

- Put the modules back together in reverse order after placing them in the room.

Note: In type CF1.5, you no longer need to install the combustion chamber lining (see section **Replace hook-in plates of the combustion chamber lining in the CF1.5** [► 25]).

2.3 Temporary storage

If the installation is carried out at a later point in time:

→ Store the components dust-free and dry at a protected location


Note: Humidity and frost may damage the components, particularly electrical parts!

2.4 Tools

Supplied tools

NO tools are supplied.

Required tools (NOT supplied):

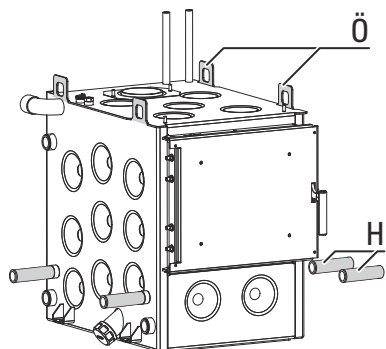

- Pipes are supplied as a lifting aid (H) for the transport of the substructure and the lifting of the fill room module and can be ordered at KWB under article number 18-1010090.
- Lifting truck
- Tip: Assembly lever, e.g. Jenni Rollfuss (<http://www.jenni.ch>)
- Spirit level, length > 80 cm
- Cross-head screwdriver
- Slotted screwdriver
- Torx T10 screw driver
- Torx T25 screw driver
- Hex wrenches in sizes 8, 13, 15, 17, 19 — as open-end wrench, socket wrench and screwdriver
- Extension bar from the socket wrench set
- Set of hex wrenches
- 2x pipe wrenches – or open-end wrench sizes 36 and 54
- Rubber mallet
- Silicone and silicone gun
- Cutter (knife)
- A cordless screwdriver is recommended.

2.5 Placement

2.5.1 Dimensions, clearances

NOTE


Ensure sufficient space for maintenance!

In the event of installations **ABOVE** the heat exchanger space:

→ Ensure a maintenance area with a distance of at least 30 cm to the installations!


If you place the basic structure flush to a wall ...

→ Install the casing parts before you move the boiler to the wall.

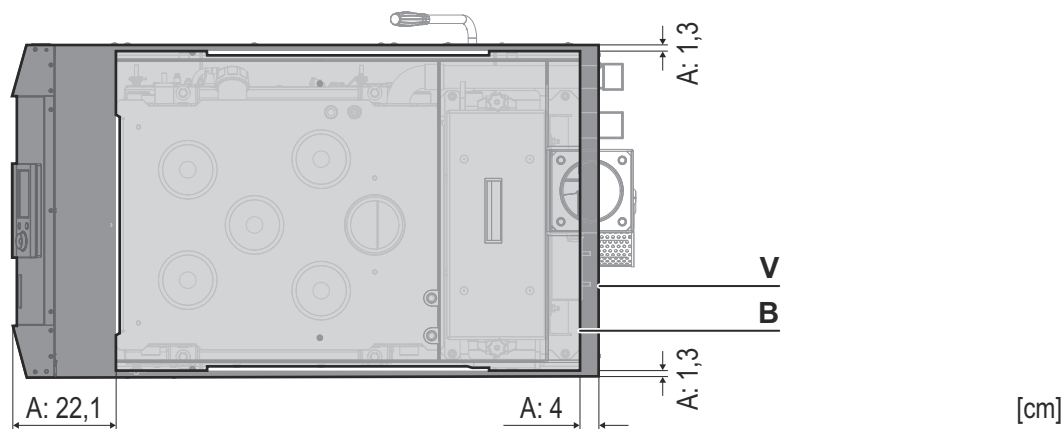Placement of the basic structure without casing

V	Boiler casing	A	Distance between casing and base plate
B	Base plate		

- You must take into account the internal distance (A) between casing and base plate!
- Add these internal distances (A) to the required distances of the installation dimensions!
- Label the boiler position in the room.

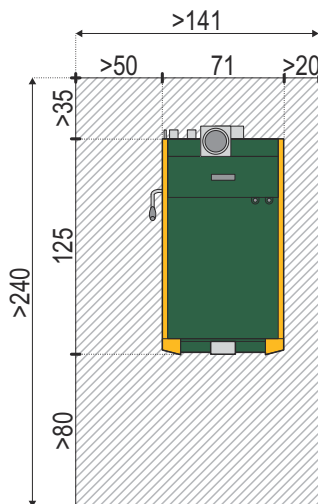Installation dimensions**Upgrading to KWB Combifire**

- If you subsequently decide to upgrade to a KWB Combifire, you will need to keep a clearance of between 111 cm and 133 cm instead of only 50 cm to the left of the boiler, depending on the fuel feed!
- If you subsequently decide to upgrade to a KWB Combifire with suction conveyance, you need to keep a clearance of at least 50 cm!

3 Prepare boiler


Note: You will find the parts for the inspection glass and the required handles inside the combustion chamber module!

- Remove the cable ties (transport securing device) at the doors.
- Remove the box.

3.1 Replace hook-in plates of the combustion chamber lining in the CF1.5

Note: The following steps only need to be carried out in type CF1.5!

Note: You will find the hook-in plates for the CF1.5 in two boxes on the palette with the accessories.

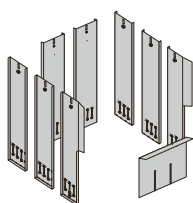


- Open the fill room door and remove all combustion chamber lining parts.
 - ↳ **Tip:** Insert a screw driver into the opening under the hook, lift the plates up and unhook them.
- Now hook in the hook-in plates for the CF1.5.

3.2 Mount the blind cover for the connecting flange


Note: You will find the blind cover for the connecting flange on the palette with the accessories.

- Remove the 4 hexagonal nuts from the threaded bolts.

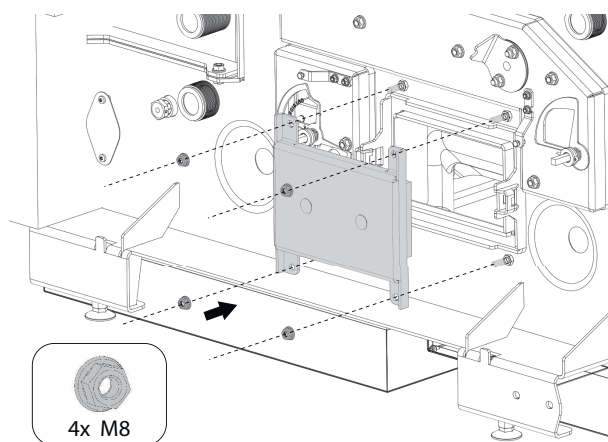

- Mount the blind cover and subsequently screw the 4 nuts back onto the threaded bolts.

3.3 Install the inspection glass slider

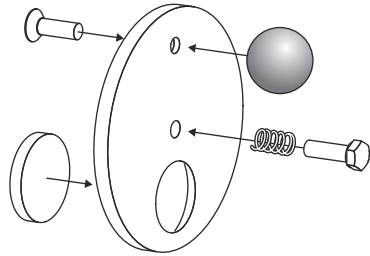

Note: You will find the parts for the inspection glass slider in a box in the combustion chamber module.


- Install the inspection glass slider on the combustion chamber door as illustrated.
- Screw in the screws in the middle (M5x16) so that only 5 mm project.

3.4 Prepare the door and install it

Note: You will find the door handles in a box in the combustion chamber module.


- ↳ The doors are factory-fastened on the right.
- Carry out the following steps if you wish to fasten the door on the left.
- Remove the door fasteners (2 × bolts + axle locking ring each) and remove the door.

Reconfigure the doors

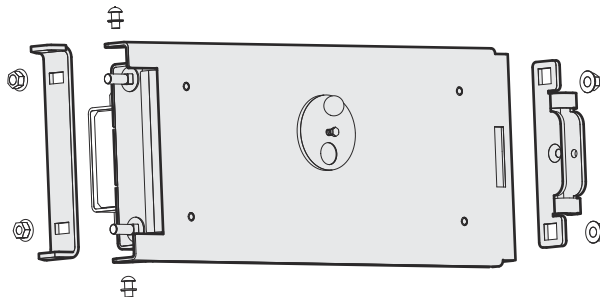

- Unscrew the hinge and the locking strip.
- Turn the door 180° and reinstall the parts.

Fill room door

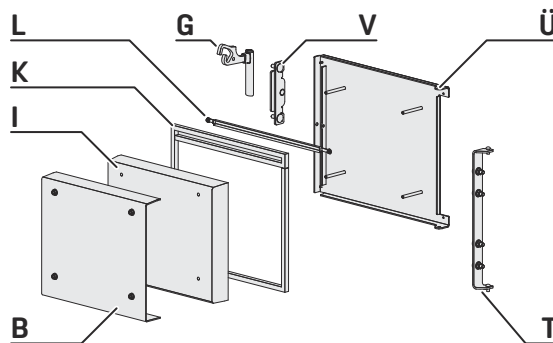


L	Slat (used as a spacer)	G	Door handle
K	Ceramic fibre cord	V	Locking strip (2x M10)

I	Insulation	Ü	Door leaf
B	Retaining plate (4x M8)	T	Hinge (4x M10)

- Dismantle the fill room door (see graphic).
- Turn the following construction elements 180°:
 - Door leaf [Ü]
 - Ceramic fibre cord [K] and strip [L]
 - Locking strip [V] and hinge [T]
- Put the construction elements back together.
- The strip [L] must be on top: It serves as a spacer in the carbonisation duct area.

Mounting the door handles

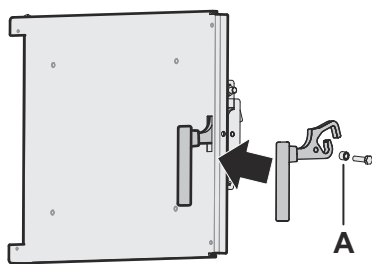


- You must take the spacer [A] into account.
- Manually tighten the door handles such that they still have ease of movement.
- Install the doors and secure the bolts with axle locking rings.


3.5 Checking the seal of the doors

Note: Perform a tightness test for the 3 inner doors. The door tightness test is shown below using the fill room door as an example. Perform the same steps when checking the tightness of the two other doors!

- Push a piece of paper between door and boiler (at the side of the door hinge in the upper part of the door).

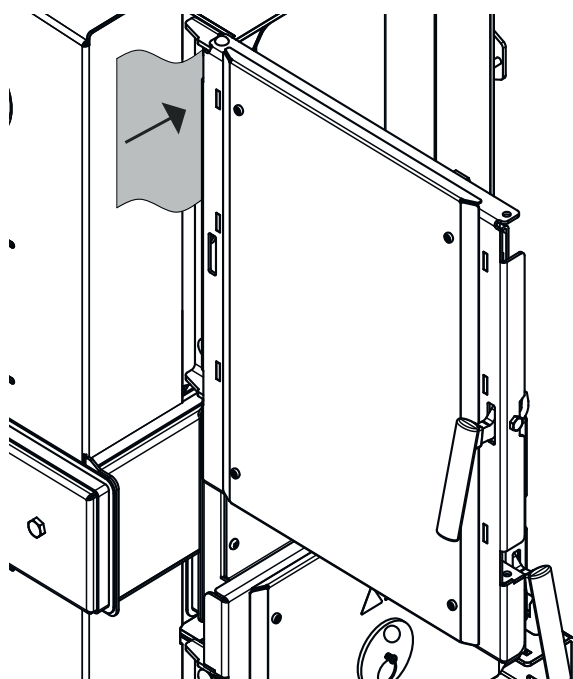


- Close the door.
- Try to pull out the sheet of paper.
 - ↳ If the sheet cannot be pulled out:
Door is tight and correctly adjusted!
 - ↳ If the sheet can be pulled out:
Door is not sealed tightly and must be newly adjusted!
(See section: **Configuring the door** [► 28])
- After adjusting the door, check its tightness again.

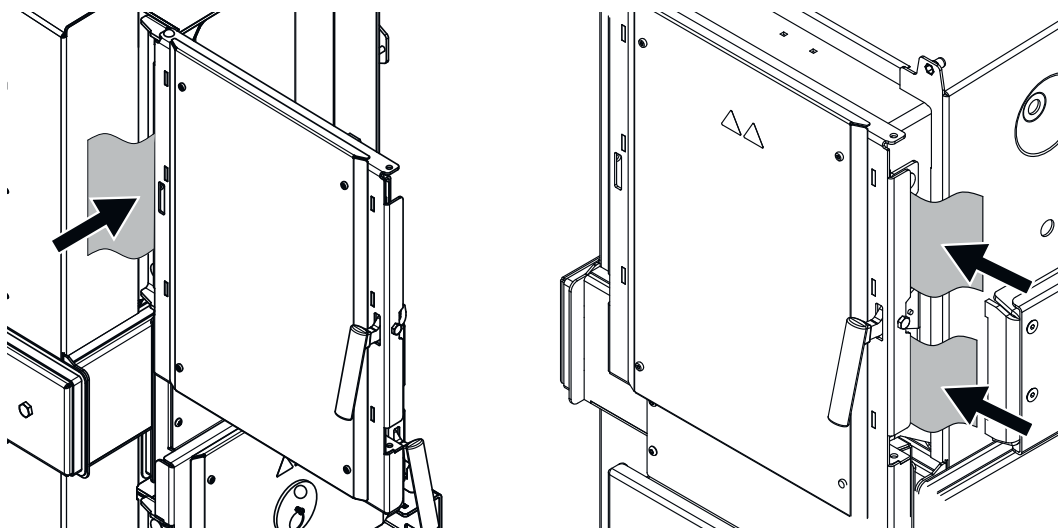

- Repeat the same approach at the door hinge side in the lower part of the door and on the door handle side.

3.6 Configuring the door

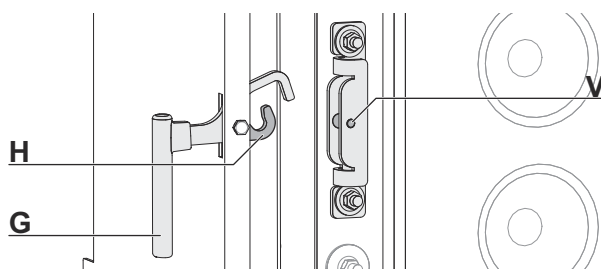

- Close the doors such that the latch [H] of the door handle [G] touches the lock [V].
- Rap the door on the side where the stop is, fully in direction of the boiler and then tighten the screws.
- Fully close the door and, if necessary, adjust the lock [V] until the pressure on the sealing is even on all sides.
- Check the contact pressure on the doors: There must be a noticeable resistance when you are closing the door.
- Loosen the screw connections, if required, and correct the door position.

Note: Make sure the doors are aligned fully horizontally!

Note: It is very easy to adjust the 3 boiler doors if one of them chafes at the top or bottom boilerplate. Loosen one of the hexagon socket screws at the hinge, lift or lower the boiler door in relation to the hinge and then re-tighten the screw.



4 Mounting the boiler

4.1 Placing the basic structure

NOTE

Placement flush to the wall

- If you place a system flush to a wall such that you will no longer have access to the right side of the system, you will have to **change the installation sequence!**
- In this case you must install the casing casing parts, before you place the boiler in its final position.

Distances to its surroundings

Adhere to the distances specified in section **Placement [► 23]** – This way, you will later have more space for the operation and maintenance of the system!


- Place the basic structure in the boiler room at the intended position.

Align

NOTE


Possible accumulation of air

- Make sure that the boiler is positioned completely horizontally.
- ↳ If its positioning is off, it is possible that undesired air accumulates inside the boiler and may have a detrimental effect on the proper functioning of the boiler!

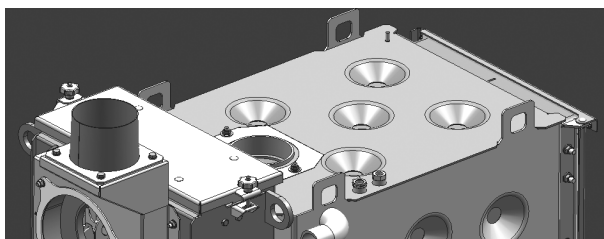

- Use the 4 hoisting lugs as support points for the spirit level.
- Put the basic structure in a horizontal position: The base plate has been equipped with set screws (M12) for this purpose. Make sure to grease the threads of the set screws to prevent abrasion. Secure (lock) the position with a second nut.


4.2 Attach the corrugated pipes

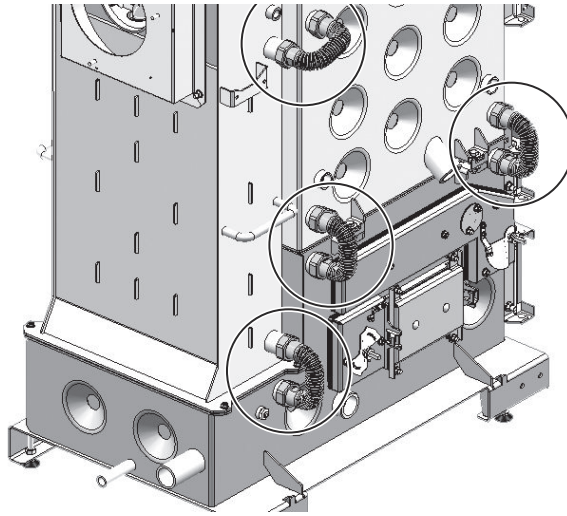

- Remove the plastic caps from the connecting pipes.
- Place the 4 corrugated pipes including seals individually as indicated and screw these together as follows:
- Place the seals respectively on the two connecting pipes and install the two corrugated pipes by manually tightening them.
Attention: Do not grease the seals!
- Fasten the union nuts with a pipe wrench.
Attention: Do not use a counter grip!

Attention: The connection must be leak-tight!

4.3 Mounting the servomotors

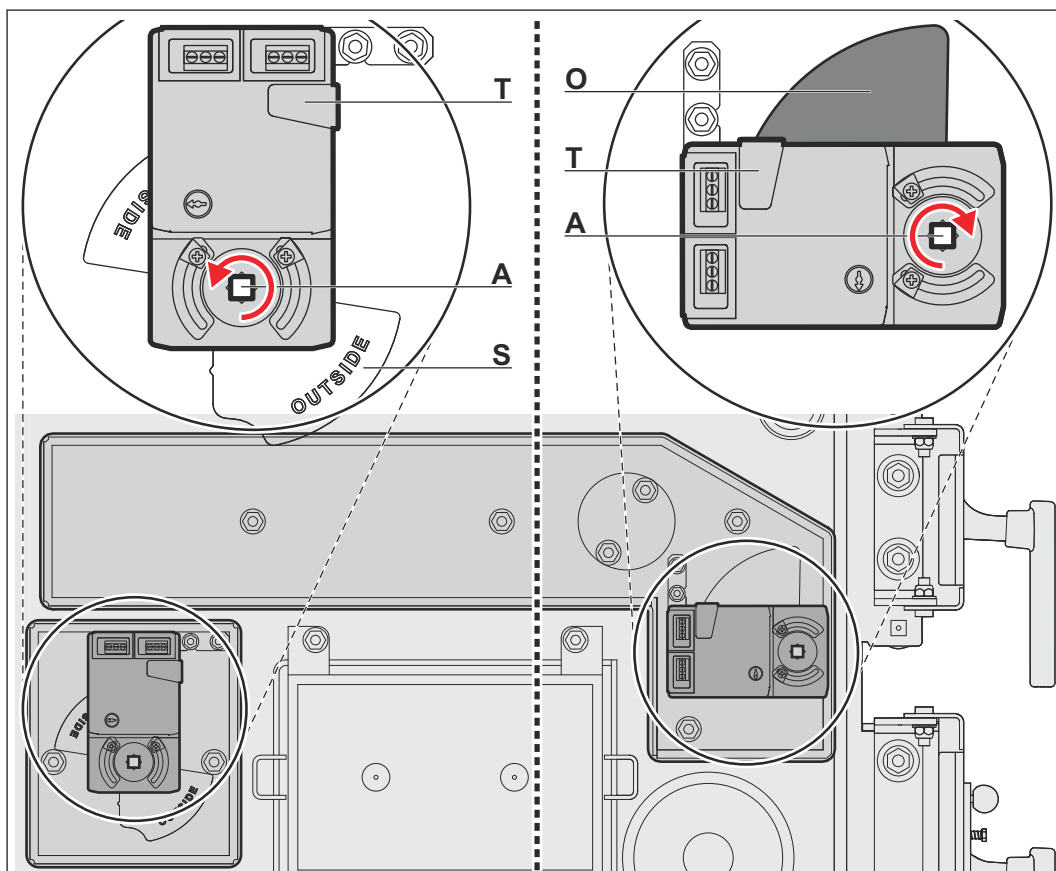


Secondary air Plug number #42		Primary air Plug number #41	
T	Safety release button	A	Shaft support
S	Label [Outside] must be outside!	O	Opening

→ Press the safety release button (T).	
→ Turn the shaft support (A) counter-clockwise to the stop.	→ Turn the shaft support (A) clockwise to the stop.
→ Using pliers turn the air shutter shaft counter-clockwise until the opening (S) is closed.	→ Using pliers turn the air shutter shaft clockwise until the opening (O) is closed.
→ Slide the servomotors onto the shafts and hook them in at the torque support.	
→ Tighten the nuts of the torque support.	

Note: The front shutter (closer to the boiler door) is the primary shutter!

For information regarding cabling see section **Establish the cable connections** [► 42].

4.4 Mounting the induced draught fan

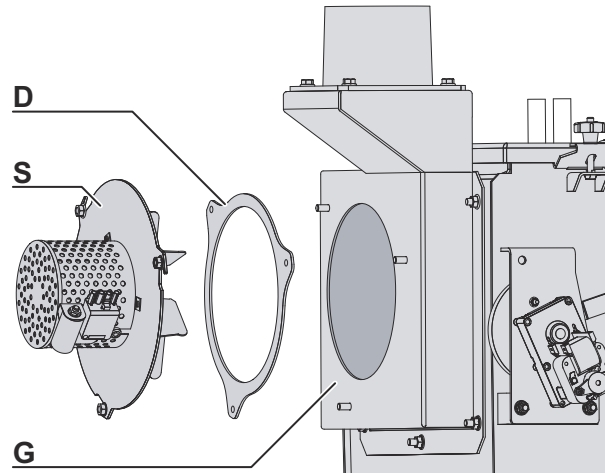


→ Slide the seal (D) onto the bolt of housing (G).


→ Screw the induced draught fan (S) to the housing (G) – 3 × M8 nuts.

For information regarding cabling see section **Establish the cable connections** [► 42].

4.5 Option: Automatic ignition

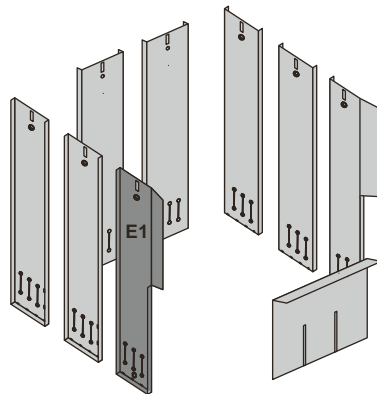


→ Remove the hook-in plate (E1) in the combustion chamber.

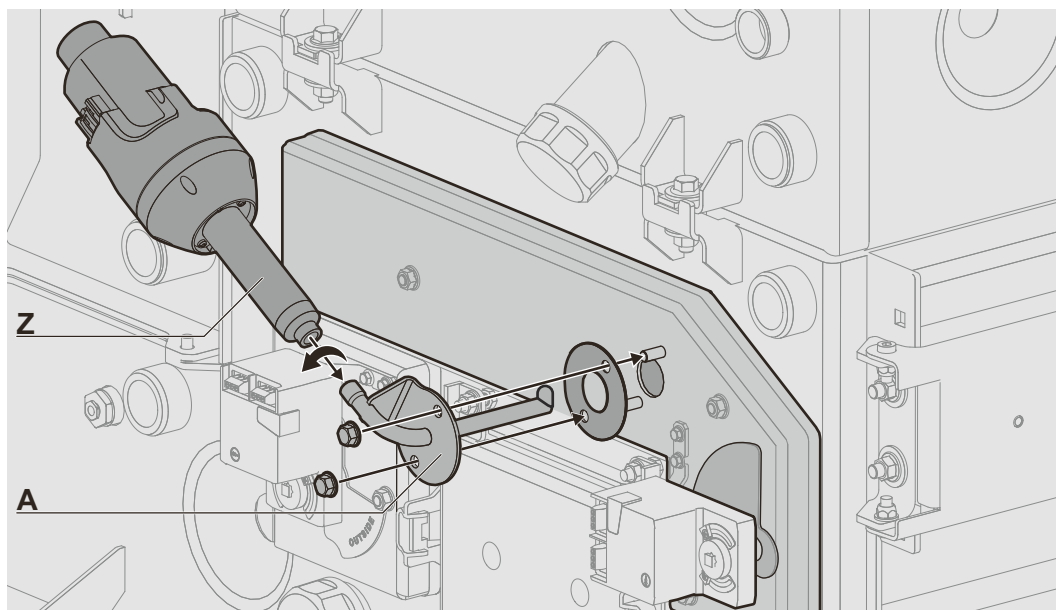

[Z]	Ignition fan	[A]	Ignition pipe
-----	--------------	-----	---------------

- Remove the cover [A] of the primary air duct.
- Select the appropriate ignition pipe:
 - The ignition pipe for type CF2 can be found in the same box as the ignition fan.
 - The ignition pipe for type CF1.5 can be found on the palette with the accessories.

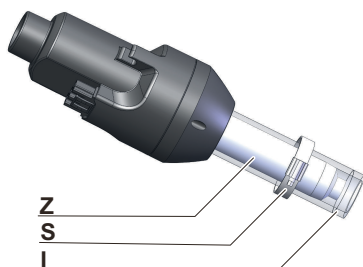

- Slide the supplied insulation [I] onto the ignition fan [Z] and fasten the insulation with a hose clamp [S] on the ignition pipe neck.
- Screw the ignition fan onto the ignition pipe.
- Install the ignition fan and ignition pipe as illustrated with the supplied seal.
- Reinstall the hook-in plate in the combustion chamber lining.

Note: To prevent that the hook-in plate slides in front of the ignition pipe, the pipe was equipped with a protrusion that keeps the hook-in plate in its position.


For information regarding cabling see section **Establish the cable connections** [► 42].

4.6 Installing the automatic heat exchanger cleaning (optional)

Note: The lever for the **manual** heat exchanger cleaning is installed when the casing is installed in section "Mounting the casing – Part 1".


- Remove the maintenance cover above the heat exchanger.

- Insert the drive shaft through the opening in the maintenance cover on the side until the shaft no longer turns freely.

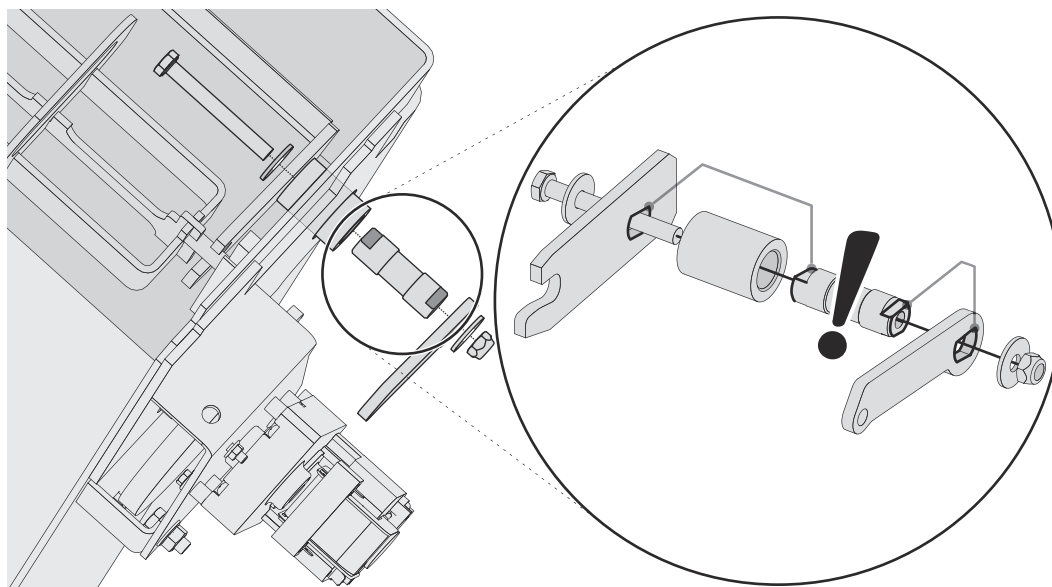

Please note the flattened parts in the assembly, only then the heat exchanger cleaning will work properly!


- Insert the long screw with a washer into the drive shaft in the heat exchanger area.
- Fasten the shaft on the outside with a washer and an M8 nut.

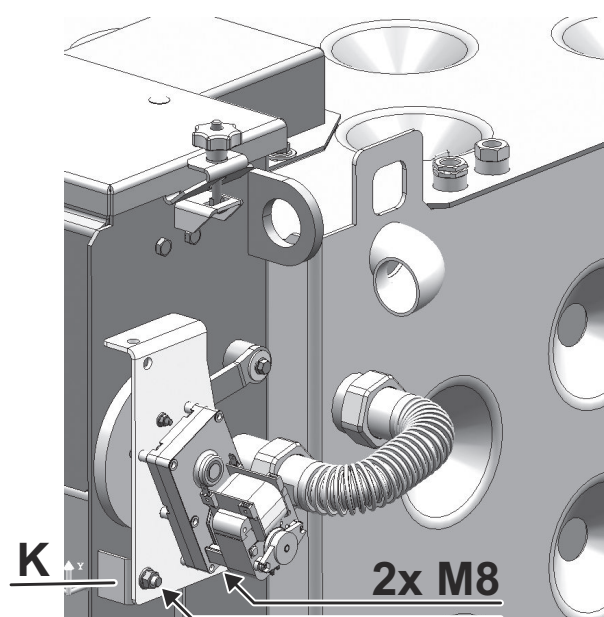

- Mount the components of the automatic heat exchanger cleaning on the respectively provided bracket [K] (2x nuts M8).
- Replace the maintenance cover on the heat exchanger.

For information regarding cabling see section **Establish the cable connections** [► 42].

4.7 Mounting the casing – Part 1

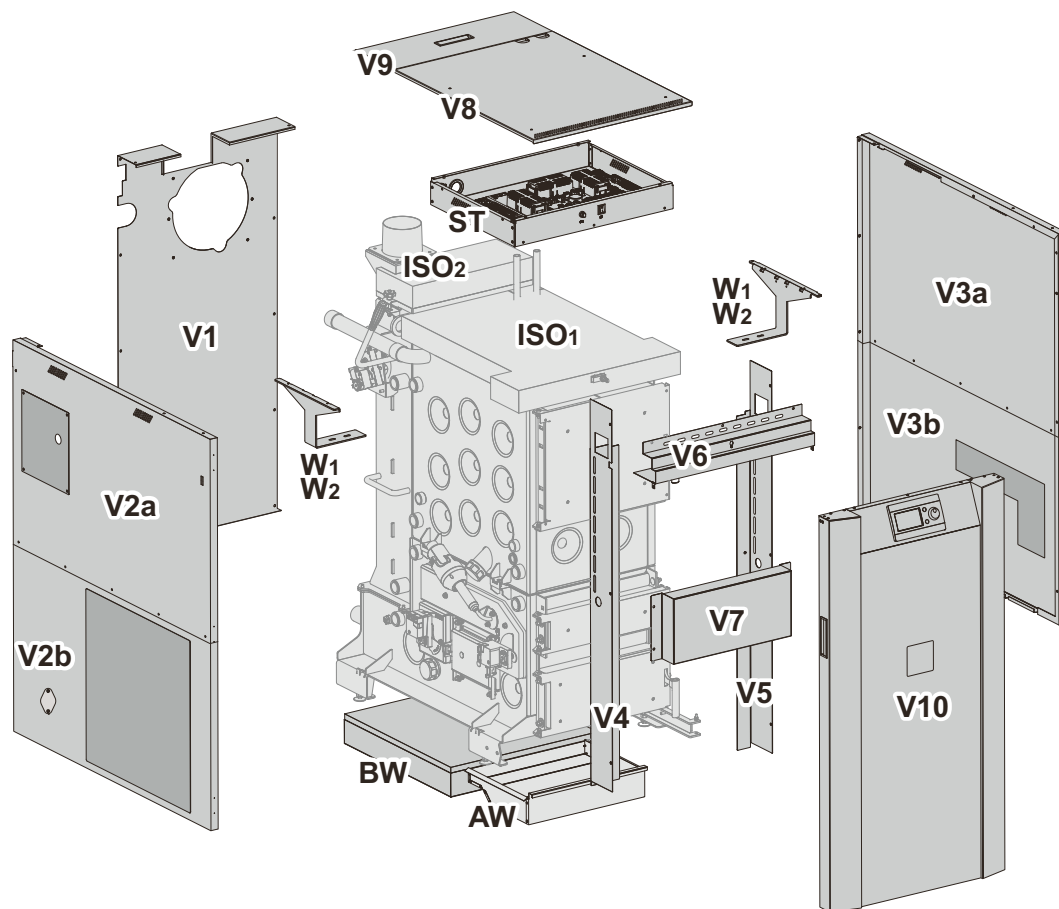

Note: The maintenance opening [V2a] is only used in the KWB Classicfire, in the KWB Combifire it must be removed.

Removing insulation


The boiler is delivered with a continuous insulation, which has pre-cut openings in a few places.

→ Depending on the ordered version – cut out the following areas; subsequently, a few parts will be insulated again:

- Ignition (option)
- Motor for automatic heat exchanger cleaning (optional)
- Corrugated pipes

Fastening bracket for door stop


Warning: There are 2 slightly different versions of the fastening brackets [W1] and [W2]!

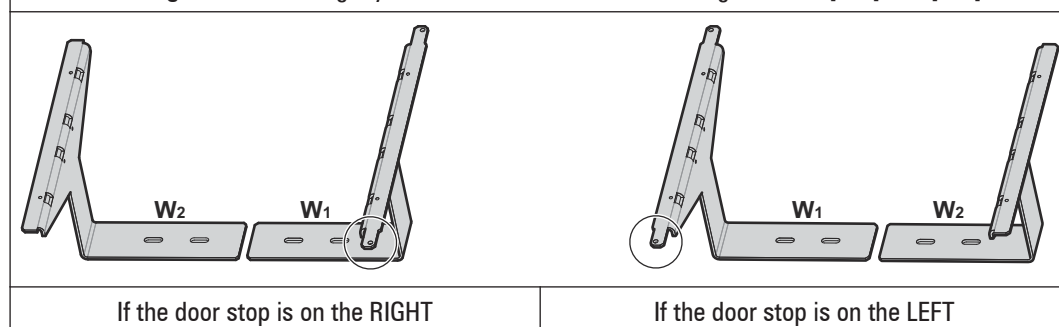

Keep in mind that the door is hung into the fastening bracket **WITH** the tabs at the ends (see graphics). (These installation steps are described in section **Installing the casing door** [► 44].)


Side casing

Left

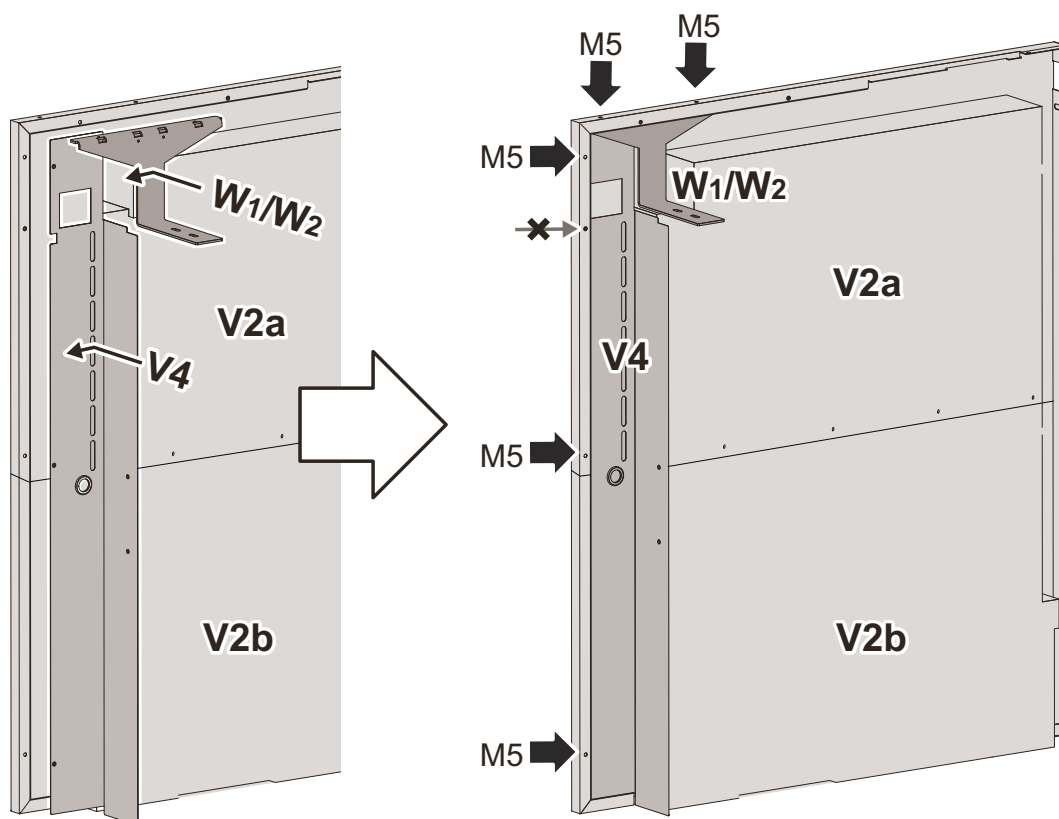

→ Screw together the 2 casing parts ([V2a] and [V2b]) of the left side casing using 6 [M5] screws.

→ Insert the left blind [V4] as shown with 3 screws [M5] into the frame of the left side casing [V2a] + [V2b].

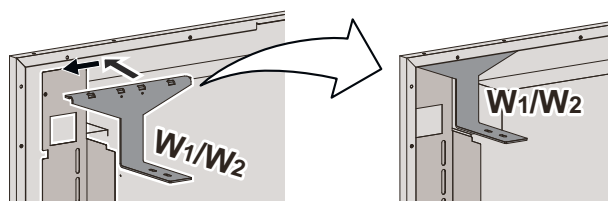


→ Insert – depending on the side where the stop is – the fastening bracket [W1] or [W2] into the frame of the left side casing [V2a]: Thread the angle first under the sheet and then push it to the left.


→ Fasten the angle with 2 [M5] screws.

Right

→ Repeat these steps analogously with the 2 right casing parts ([V3a] and [V3b]) and with the right blind [V5] and the remaining angle with the right-side casing [V3a].

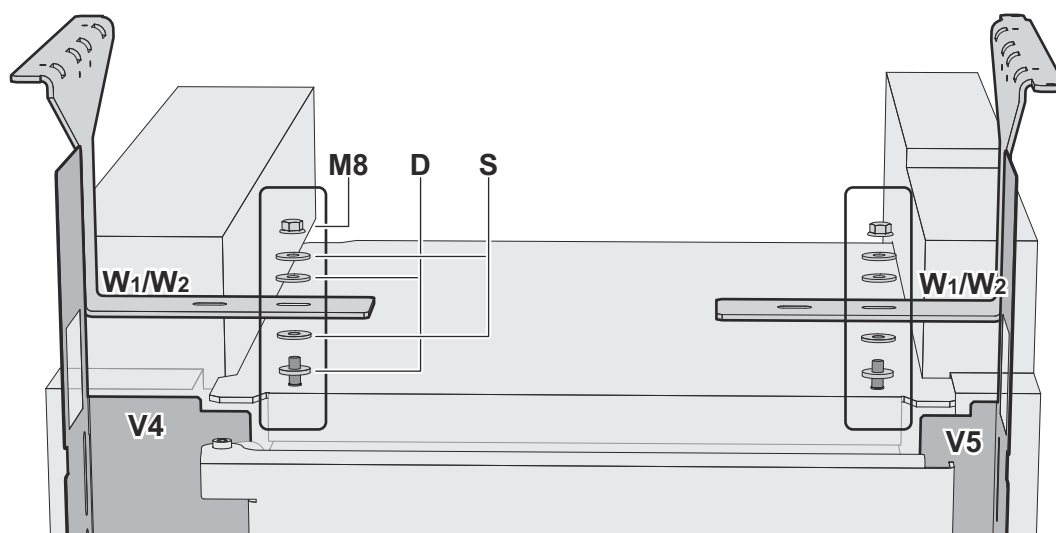

- Insert one acoustic insulating disc [D] each and one washer [S] onto the two studs on top of the boiler (image).
- Insert the complete side parts onto the studs on the floor plate (left graphic representation)
- Bring the two completed side parts including fastening brackets into a horizontal position and place them each on the studs at the boiler: **Please note the different hole positions!**
- Place one acoustic insulating disc [D] and one washer [S] each on the two studs and manually fasten the two brackets with a nut [M8].

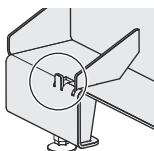


Basic equipment: Lever for the heat exchanger cleaning

If you have the **basic** equipment, you should now install the lever for the heat exchanger cleaning.


Note: The **optionally** available automatic heat exchanger cleaning must be mounted before the casing is installed: Section **Installing the automatic heat exchanger cleaning (optional)** [► 34].

Lever

- Remove the opening for the lever at the predetermined breaking point at the maintenance cover on the side. Deburr the edges!
- Remove the maintenance cover above the heat exchanger.

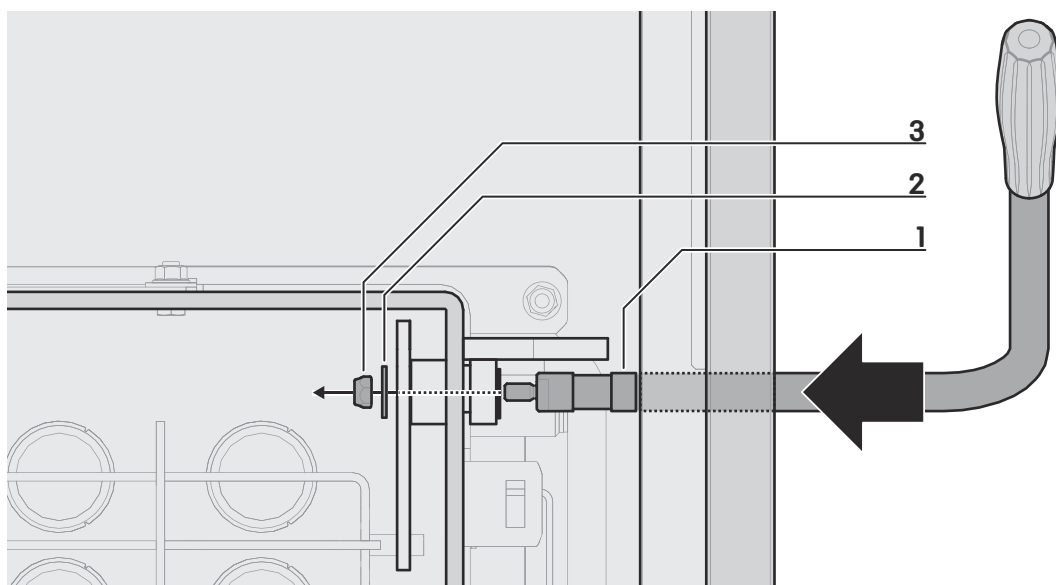

- Insert the lever [1] through the opening in the maintenance cover on the side until the lever no longer turns freely. Only then, fasten the lever from the inside with a disk [2] and an M6 nut [3].

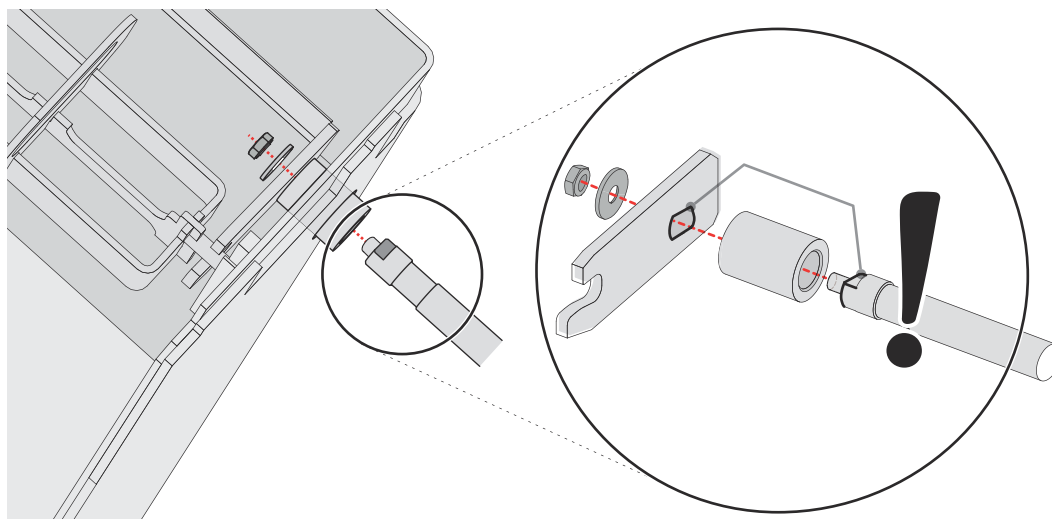


Please note the flattened parts in the assembly, only then the heat exchanger cleaning will work properly!

- Replace the maintenance cover on the heat exchanger module.

Installing the control box

- Place the insulation [ISO1] on top of the fill room module.
- Turn the control box [ST] so that the switch is in **front**.

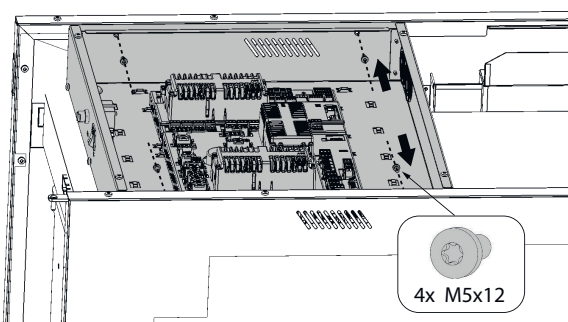

- Place the control box [ST] on the boiler and connect the control box with the side casings [V2a] and [V3a] using 4 M5 screws.


Tip: During the installation work, make sure to protect the casing parts on top with cardboard.

Please also see

- 📖 Installing the automatic heat exchanger cleaning (optional) (► 34)

4.8 Close the back


Lambda sensor

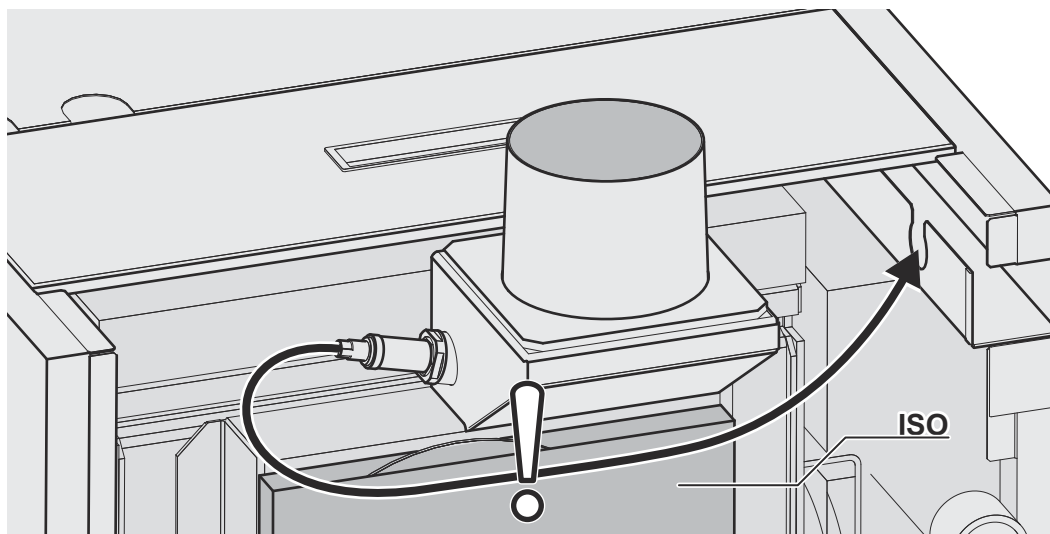

- Run the lambda probe cable as illustrated behind the exhaust gas box **outside the insulation** [ISO].
- Run the extension cable from the control box to the back to the cable duct.
- Screw in the lambda probe hand-tight into the plastic socket.
- Connect the extension cable with the lambda probe cable.

Connector	Pins	Description	Function
200	6	6-pole connection sensor	Lambda probe

Insulation

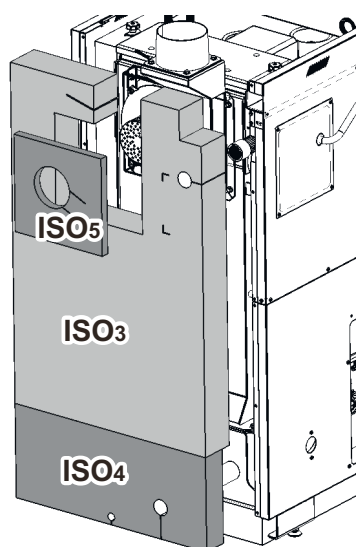


- Install the 3-part insulation at the rear:
 - Insulation top [ISO3]
 - Insulation bottom [ISO4]
 - Insulation induced draught [ISO5]

Casing


- Install the back [V1] (unvarnished metal plate) using 12 M5 screws in the rear and 2 M5 screws on top.

Induced draught

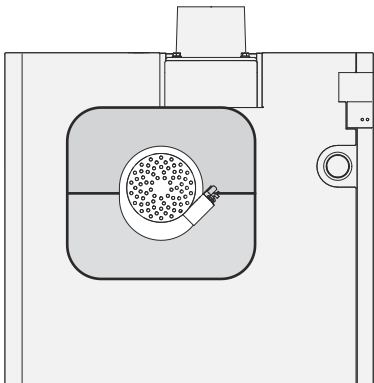

- Mount the two parts of the frame around the induced draught.

4.8.1 Installing the power supply plug

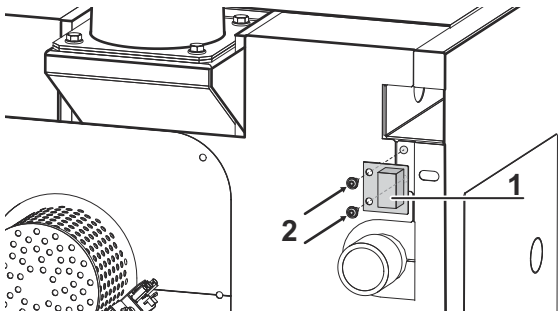

Cable routing

- Run the cables including plug and metal plate from the control cabinet into the cable duct to the rear.
- Mount the plug including the metal plate with 2 screws to the rear of the boiler [2].

Conne- tor	Pins	Description	Function
100	5	3-pole power supply 230 V _{AC}	Boiler power supply (L1 to L3 bridged)

4.9 Mounting the sensors




CAUTION

Damage to cables due to hot surfaces

- Use the existing cable ducts to run the cables.
- Always run cables outside of the thermal insulation!
- Always prevent the cables from contacting hot surfaces.

4.9.1 Safety temperature limit sensor and boiler temperature sensor

These two immersion sleeves are located on the top of the fill room module.

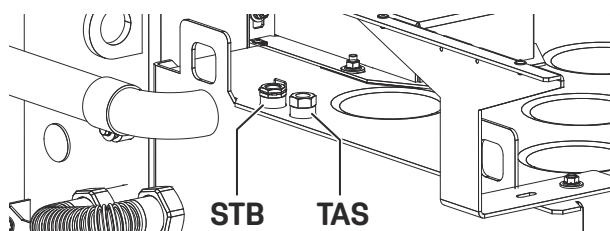

TDV: Immersion sleeve for the thermal discharge valve.

STL

- Run the capillary tube of the safety temperature limiter through one of the grommets in the control box to the rear into the immersion sleeve [STB].
- Slide the boiler temperature sensor into the same immersion sleeve [STB].
- Carefully secure the capillary tube and sensor with the clamp.

TDV

- The immersion sleeve [TAS] for the sensor for the thermal discharge valve will only be used when the boiler is integrated into the hydraulic system and is left unused for the moment!

Conne- tor	Pins	Description	Function
111	2	2-pin digital input 230 V _{DC}	Safety temperature limiter (STL)
218	2	2-pole connection sensor PT1000	Boiler forward flow temperature

4.10 Establish the cable connections




CAUTION

Damage to cables due to hot surfaces

- Use the existing cable ducts to run the cables.
- Always run cables outside of the thermal insulation!
- Always prevent the cables from contacting hot surfaces.

Cable ducts

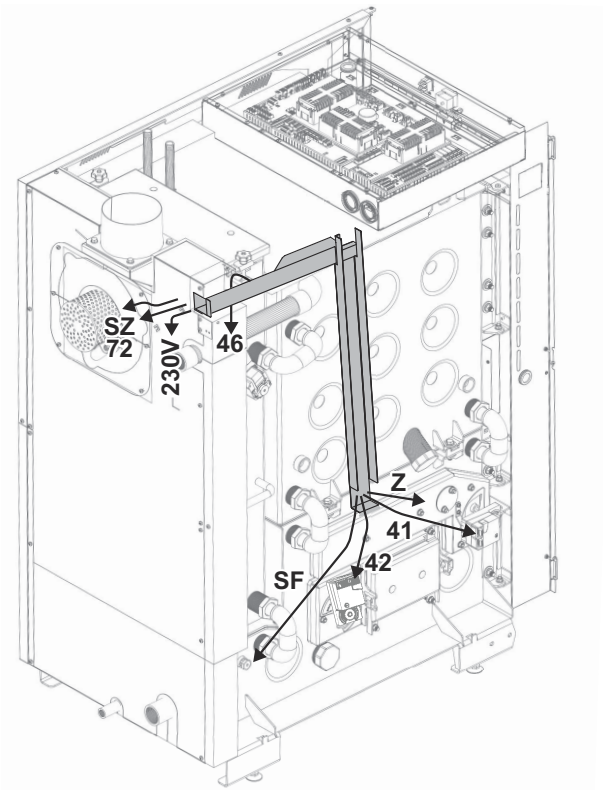

[SZ] 72	Induced draught: power supply and speed monitoring		
46	Heat exchanger cleaning system		
[Z]	Ignition rod	41	Servo drive primary air
		42	servo drive secondary air
[SF]	Flame temperature sensor		

Fasten the cabling

NOTE	Possible damage because cabling has been installed too loosely → Secure all cables in the cable duct with cable ties! → You ensure electrotechnical safety with this kind of strain relief.
-------------	--

Downward cabling

- Thread the cables from the control box into the vertical cable duct on the left:
- Connect cables #106 and #107 with the plug at the ignition rod.
 - Connect cable #213 with plugs #41 (servo drive primary air) and #42 (servo drive secondary air)
 - Run the flame temperature sensor #220 between side casing and insulation to the immersion sleeve. Pull the sensor through the opening in the casing first to the outside and then insert the sensor into the immersion sleeve [SF]. The sensor is fastened to the cable with the spring.

Connec- tor	Pins	Description	Function
106	3	1-pole (L) supply 230 V _{AC}	Ignition rod fan for log wood

107	3	2-pin (L+N) supply 230 V _{AC}	Ignition rod heating system
213	12	10-pole connection sensor & actuator	Primary air, air shutter: OPEN/CLOSED (1-5-9) and position (3-7-11). Secondary air, air shutter: OPEN/CLOSED (2-6-10) and position (4-8-12).
220	2	2-pole connection sensor type K	Flame temperature

Cabling to the rear

- Run the cables in the cable duct from the control box to the rear (induced draught) and then to the bottom left (heat exchanger cleaning):
 - Connect the cables #113 and #211 with plug #46 and the plug [Saugzug] at the induced draught fan.

Conne- tor	Pins	Description	Function
113	6	6-pole supply 230 V _{AC}	Heat exchanger cleaning (1-2-3) and induced draught (4-5-6)
211	6	6-pin connection sensor	Induced draught, fan speed (4-5-6)

4.11 Mounting the casing – Part 2


4.11.1 Installing the casing door

The casing door can be installed on the right or left.

Door magnets


- Insert the three (3) magnet catches in the positions at the door (on the "other" side).
- Install the three (3) metal counterparts with 2× screws (2.9×13 – Torx T10) at the front edge of the side casing.

Door holder

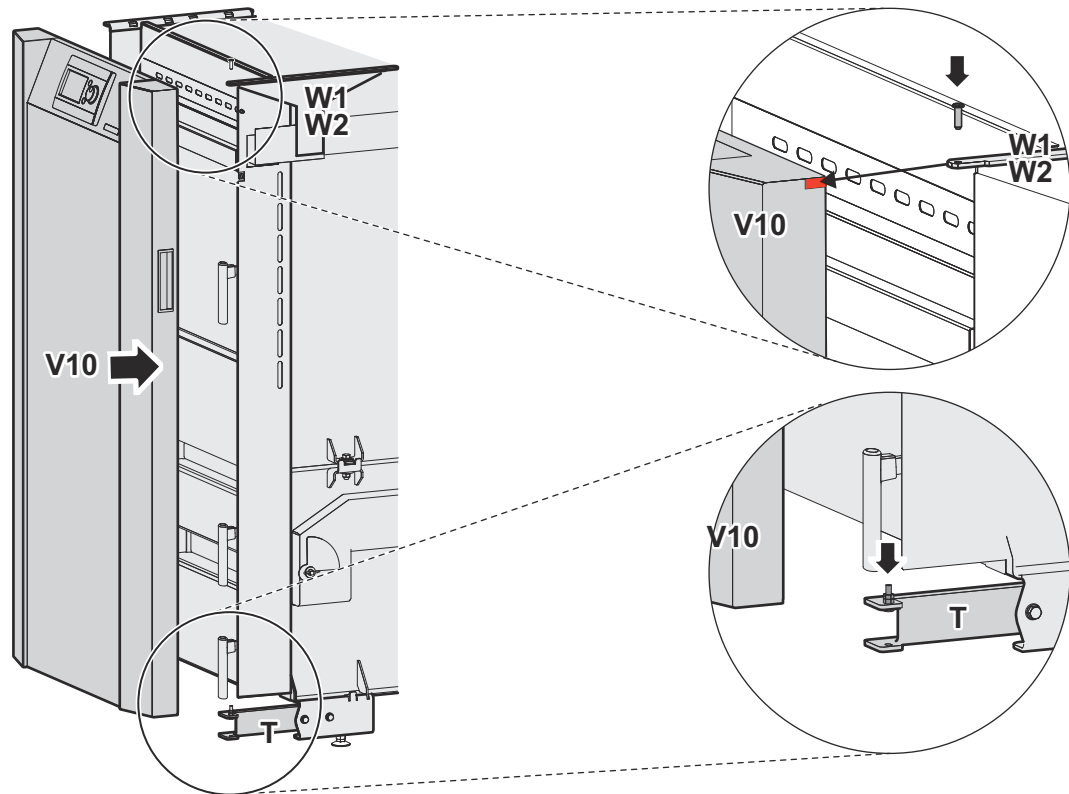


- Insert 1 × M6 × 25 screw from below into the front end of the door bracket [T] and secure it hand-tight with a nut. Also screw the 2nd nut onto the screw. It is used to vertically align the door.
(graphic representation, bottom)
- Screw the door bracket [T] (2 × M8 × 20) manually to the floor plate.
- Hook the casing door [V10] in at the door bracket [T] screw **at the bottom**.

Mounting

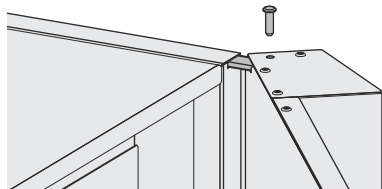


- Insert the **upper** part of the casing door into the tab and secure the connection with a hinge bolt.
(graphic representation, top)
- Close the casing door to facilitate alignment.
Ensure an even vertical air gap between casing door and side parts.
- Tighten the screws (2 × M8 × 20) at the door bracket [T].

4.11.2 Installing the maintenance cover

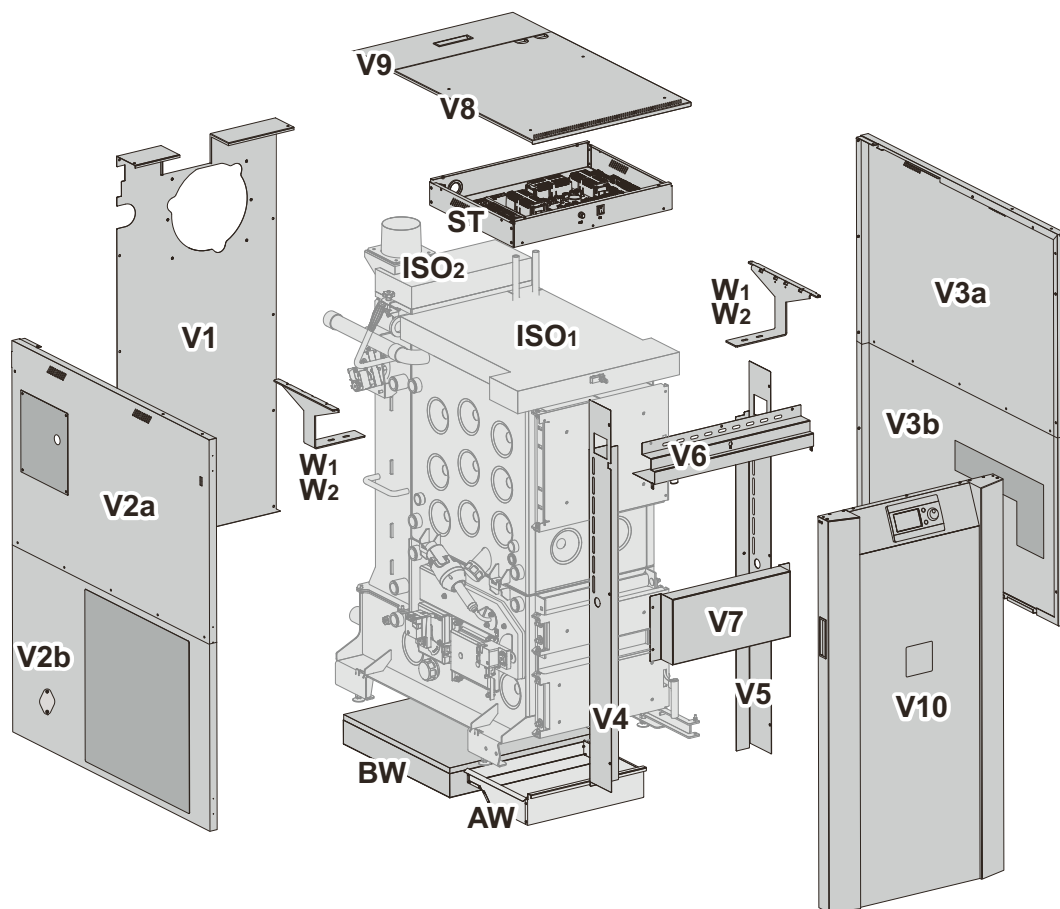


Alignment

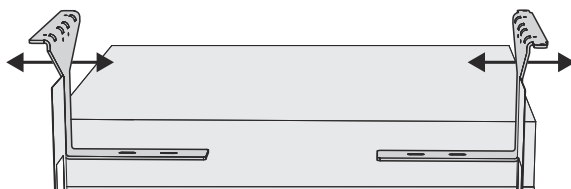

→ Align the casing parts and secure the fastening brackets [W1] and [W2].


Maintenance cover

- Install the maintenance cover using 7 M5 screws at the side casing [V3b] on the right.
- Install the maintenance cover using 8 M5 screws at the side casing [V2b] on the left.
- Only for automatic heat exchanger cleaning system: Install the maintenance cover using 4 screws M5 at the side casing [V2a] on the left.
- Mount the small oval maintenance cover using 2 M5 screws at the left side casing [V2b] above the flame temperature sensor.

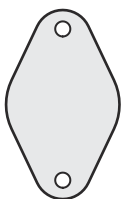


4.11.3 Installing the control unit

- Insert the supplied **grommets** at half height into the side casing parts [V4] and [V5].
- Make a cut into the insulation behind the bushing [D] to the control unit so that you can thread the cable through there later.
- Insert the supplied grommet into the bushing [D] at the inside of the casing door.

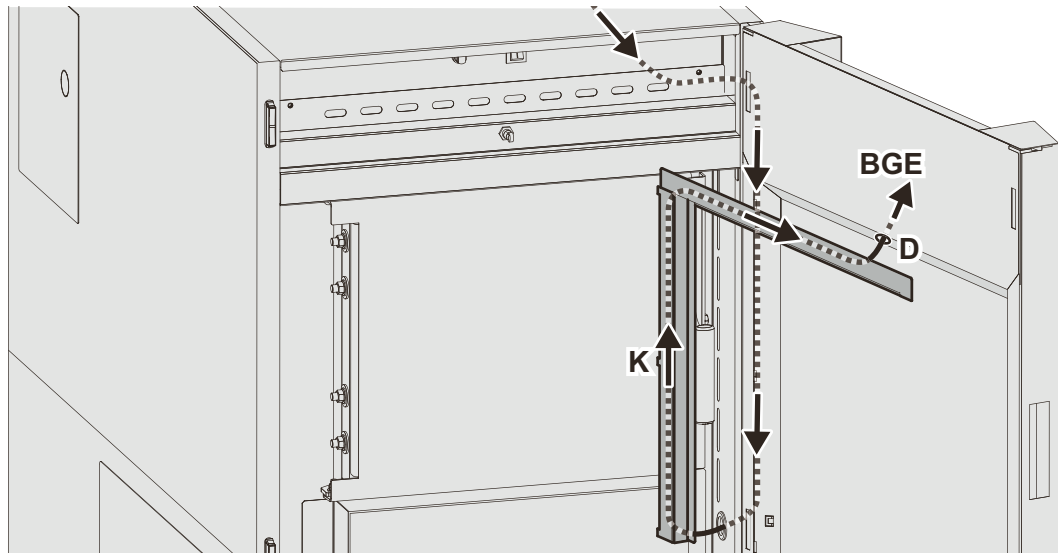

- Route the cable [K] from the control box and the optionally supplied Ethernet cable for the KWB Comfort Online as shown through the bushing [D] to the control unit [BGE] at the door.

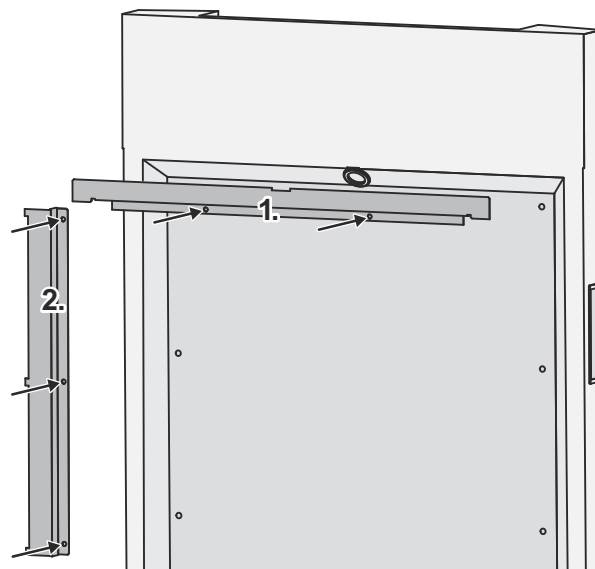

- Mount the cable duct above the two cables.
 - Fasten the horizontal part with 2 M5 screws.
 - Fasten the vertical part with 3 M5 screws.
- Connect both cables with the control unit.


137	9	Bus flat connector (3 + 4 = unused. 9 = screen/shield.)	House bus [IN] + 24 V _{DC} control unit and boiler bus [IN] + 24 V _{DC} control unit Only to be used for the boiler control unit!
-----	---	--	---

- Insert the supplied battery into the control unit.
- First, position the control unit at the upper edge and then press the bottom edge of the control unit into the bracket.

4.11.4 Door contact switch

- Install the door contact switch (is in the control box) onto the casing part [V6] that has not been installed yet.

Connec- tor	Pins	Description	Function
----------------	------	-------------	----------

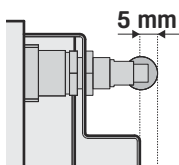

- Align the door contact switch such that the outer point of the counterpart projects 5 mm over the sheet edge.
- Thread the cable to the right under the control box to the front to the casing part [V6]. Make sure that you thread the cable between control box and insulation!
- Install the blind [V6] at the control box (3 M5 screws in front) and the side casings (1 M5 screw each on the side under the edge).

Middle front

- Install the middle casing part including insulation [V7] with 4 screws M5 at the fill room module.
- Close the casing door. Ensure that the limit switch switches securely!

4.12 Closing the casing

Under the boiler

- Place the floor trough [BW] including insulation under the combustion room module.
- Place the ash trough [AW] including insulation under the combustion room module.

Cover

- Place the black insulation mat [IS02] and casing [V9] on the heat exchanger maintenance cover.
- Mount the casing [V8].

5 Final steps

5.1 Affixing the stickers

NOTE

Hazard due to missing safety sticker


- ↳ Safety stickers save lives! They protect you against injuries and prevent damage to property and equipment!
- Ensure the correct use of the heating system: Attach ALL stickers as indicated in the instructions!
- Give the unused stickers to the operator of the heating system and instruct the operator regarding the possible hazards and/or consequences!
- Order any missing or incorrect stickers from KWB.

- Attach the KWB Logo to the front casing.
- Using the template, affix the correct lettering (depending on boiler type: Classicfire or Com-bifire) to the front casing.
- Affix the stickers.
- ↳ See section: **Stickers** [► 14]

27-2000222 – languages: DE | EN | FR

27-2000223 – languages: ES | IT | SL

5.2 Bracket for cleaning tools

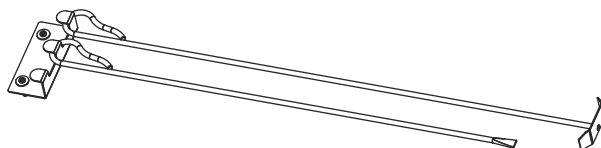

- Install the bracket for the cleaning tools on the wall using anchor bolts.

5.3 Completion of Assembly

- Leave the construction site in a clean condition.

6 Appendix

Please also see

- 📄 Declaration of conformity CF2 (► 52)
- 📄 Technical data sheet CF2 log wood (► 53)

6.1 Dismantling and disposal

6.1.1 Dismantling

- ✎ Dismantle the boiler in reverse order of the assembly sequence. Consult KWB customer service for advice! Comply with local regulations!
- Shut down the heating system and disconnect the boiler from the mains after the system has cooled down.
- Empty the boiler.



WARNING

Fatal crushing (pulled muscles) caused by heavy components! Inappropriate lifting/transporting can lead to fatal injury and serious damage to the equipment.

- ✎ **Only trained staff** may lift/transport heavy components!
- ✎ **Keep the component weight in mind – handle accordingly:**
 - Verify transport securing devices BEFORE lifting / transporting!
 - Keep the centre of gravity in mind - always secure components to prevent slipping and tilting!
 - Select stable bases, suitable tools and assistance from staff!
 - Lift with your back straight, NOT too heavy.
 - Use your personal protection equipment[PSA].
 - In difficult areas ensure that people and system are safe!

- Remove the ash from the boiler.
- Remove the casing cover parts and the cabling.
- Disconnect the boiler from the hydraulic system and the chimney connection.

6.1.2 Disposal

- Comply with local waste disposal regulations! Ensure environmentally sound disposal pursuant to AWG (Austria) or country-specific provisions.
- Recyclable materials can be taken separately and in clean condition to the specified recycling points.

In principle, you can dispose of the heating system as residual or bulky waste – but we recommend separating its components for recycling purposes (in a recycling centre) in order to handle resources in a more sustainable manner.

Plastic materials

The control unit housings, cable bushings and seals are made of plastic or rubber.

Construction waste


This includes the insulation (mineral wool) and the refractory bricks from the combustion chamber.

Metal


Our main material is metal which can be recycled efficiently: boiler bodies, cables ...

Circuit boards

- Dispose of these responsibly!
- Comply with all local waste disposal regulations!

 CAUTION	<p>Hazardous waste – dispose of properly!</p> <p>The metals on and in the circuit boards do NOT belong in the household waste.</p> <ul style="list-style-type: none"> ↳ All circuit boards used by KWB comply with the "Directive 2002/95/EC for the restriction of certain hazardous substances in electrical and electronics equipment". → Take the circuit boards to a proper disposal facility – this helps protect the environment! → Dispose of the circuit boards at collection points for electronic waste only.
--	--

Battery

 CAUTION	<p>Environmental contamination by batteries</p> <ul style="list-style-type: none"> ↳ There is a lithium battery inside the boiler control unit. → Dispose of the battery separately. When doing so, you must comply with all local regulations!
--	--



The following characters below the garbage bin symbol stand for:

- Pb: Battery contains lead
- Cd: Battery contains cadmium
- Hg: Battery contains mercury

Old batteries may not be disposed of in the household waste: EU Directive 2006/66/EC obligates consumers to dispose of batteries/rechargeable batteries at a collection point (more information can be found at <http://www.epbaeurope.net/>). Returning batteries to communal collection points is free of charge for private households.

Alternatively, you can send used batteries from the KWB control unit back to us. When sending batteries/rechargeable batteries, you must meet a few special conditions: Please inquire ahead of time (hazardous materials) and be sure to provide sufficient postage.

Declaration of Conformity

As specified by the EC Machinery Directive 2006/42/EC, Annex II 1 A

We hereby declare that the specified system in the series version complies with all applicable provisions of the Machine Directive.

Boilers of the model range

KWB Classicfire 18–38 kW

Comprising the models: CF1.5 18 / 28 / 32 / 38 and CF2 18 / 28 / 32 / 38

Furthermore, the system conforms to the following directives/applicable regulations:

Electromagnetic Compatibility EMC-directive 2014/30/EU; Low Voltage Directive (LVD) 2014/35/EU;
RoHS-directive 2011/65/EU

Applied European harmonised standards:

EN 303-5:2012, EN 60335-1:2014-04, EN 60335-2-102:2006, ÖNORM EN ISO 12100:2013-10-15

KWB – Kraft und Wärme aus
Biomasse GmbH

St. Margarethen an der Raab
09.01.2019



Authorised representative for
the compilation of the technical
documents

Place,
Date

Helmut Matschnig,
Managing Director

CF1.5 CF2 18.01.2021	Unit	CF1.5 18	CF1.5 28	CF1.5 32	CF1.5 38	CF2 18	CF2 28	CF2 32	CF2 38
		Log wood	Log wood	Log wood	Log wood	Log wood	Log wood	Log wood	Log wood
Rated power	kW	18,3	28,6	31,9	38,0	18,3	28,6	31,9	38,0
Partial load	kW	-	14,3	14,2	14,2	-	14,3	14,2	14,2
Boiler efficiency at rated power	%	93,4	92,4	92,4	91,8	93,4	92,4	92,4	91,8
Boiler efficiency at partial load	%	-	93,0	93,0	93,0	-	93,0	93,0	93,0
Fuel thermal output at rated power	kW	19,6	31,0	34,5	41,4	19,6	31,0	34,5	41,4
Fuel thermal output at partial load	kW	-	15,4	15,3	15,3	-	15,4	15,3	15,3
Full load burn-off period	h	10	6,2	5,9	5,8	12,2	7,6	7,3	6,6
Boiler class according to EN 303-5:2012	-	5	5	5	5	5	5	5	5
EU Energylabel	-	A+	A+	A+	A+	A+	A+	A+	A+
Water side									
Water content	l	141	141	141	141	141	141	141	141
Water connection, forward/return flow (internal thread)	inch	6/4	6/4	6/4	6/4	6/4	6/4	6/4	6/4
	mm	38,1	38,1	38,1	38,1	38,1	38,1	38,1	38,1
Water connection for filling and/or emptying (internal thread)	inch	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2
	mm	12,7	12,7	12,7	12,7	12,7	12,7	12,7	12,7
Thermal safety valve: pressure	bar	2-4	2-4	2-4	2-4	2-4	2-4	2-4	2-4
Water connection for thermal safety valve (internal thread)	inch	1/2	1/2	1/2	1/2	1/2	1/2	1/2	1/2
	mm	12,7	12,7	12,7	12,7	12,7	12,7	12,7	12,7
Water-side resistance at 20 K	mbar	13,5	13,5	13,5	13,5	13,5	13,5	13,5	13,5
	Pa	1350	1350	1350	1350	1350	1350	1350	1350
Boiler-entry temperature	°C	55	55	55	55	55	55	55	55
Working temperature/operating temperature	°C	80	80	80	80	80	80	80	80
Maximum permitted temperature	°C	110	110	110	110	110	110	110	110
Maximum operating pressure	bar	3,5	3,5	3,5	3,5	3,5	3,5	3,5	3,5
Buffer tank required	-	✓	✓	✓	✓	✓	✓	✓	✓
Minimum usable buffer tank volume	l	1500	1500	1500	1500	1800	1800	1800	1800
Recommended usable buffer tank volume	l	1800	1800	1800	1800	2500	2500	2500	2500
Exhaust-gas side (data for chimney design)									
Combustion chamber temperature	°C	900-1100	900-1100	900-1100	900-1100	900-1100	900-1100	900-1100	900-1100
Combustion chamber pressure (unregulated)	mbar	< 0	< 0	< 0	< 0	< 0	< 0	< 0	< 0
Required draft at rated power/partial load	mbar	0,08	0,08	0,08	0,08	0,08	0,08	0,08	0,08
		-	0,05	0,05	0,05	-	0,05	0,05	0,05
Induced draught required	-	✓	✓	✓	✓	✓	✓	✓	✓
Exhaust-gas temperature at rated power	°C	160	160	160	160	160	160	160	160
Exhaust-gas temperature at partial load	°C	-	100	100	100	-	100	100	100
Exhaust-gas mass flow at rated power	kg/s	0,023	0,023	0,023	0,023	0,023	0,023	0,023	0,023
Exhaust-gas mass flow at partial load	kg/s	-	0,011	0,011	0,011	-	0,011	0,011	0,011
Exhaust-gas volume at rated power	Nm³/h	54	54	54	54	54	54	54	54
Exhaust-gas volume at partial load	Nm³/h	-	27	27	27	-	27	27	27
Chimney connection height	mm	1590	1590	1590	1590	1590	1590	1590	1590
Exhaust-gas connection diameter	mm	150	150	150	150	150	150	150	150
Incline of the Exhaust-gas pipe	°	≥ 3	≥ 3	≥ 3	≥ 3	≥ 3	≥ 3	≥ 3	≥ 3
Chimney diameter (minimum)	mm	150	150	150	150	150	150	150	150
Chimney design: moisture-resistant	-	✓	✓	✓	✓	✓	✓	✓	✓
Fuel									
Permissible fuels: log-wood (L50, M25 acc. to EN 17225-5)	-	✓	✓	✓	✓	✓	✓	✓	✓
Maximum length log-wood	cm	55	55	55	55	55	55	55	55
Maximum water content (fresh weight)	kg/kg	≤ 25	≤ 25	≤ 25	≤ 25	≤ 25	≤ 25	≤ 25	≤ 25
Pellets of pure wood in accordance with ISO 17225-2	-	✓	✓	✓	✓	✓	✓	✓	✓
Fill chamber									
Fill chamber volume	l	160,8	160,8	160,8	160,8	183,8	183,8	183,8	183,8
Width of fill doors	mm	440	440	440	440	440	440	440	440
Height of fill doors	mm	364	364	364	364	364	364	364	364
Electrical system									
Connection	-	230V, 1~ 50Hz, C13 A	230V, 1~ 50Hz, C13 A	230V, 1~ 50Hz, C13 A	230V, 1~ 50Hz, C13 A	230V, 1~ 50Hz, C13 A	230V, 1~ 50Hz, C13 A	230V, 1~ 50Hz, C13 A	230V, 1~ 50Hz, C13 A
Unit switch and main switch: present	-	✓	✓	✓	✓	✓	✓	✓	✓
Connected power boiler (minimum)	W	151	151	151	151	151	151	151	151
Connected power boiler (maximum)	W	1288	1288	1288	1288	1288	1288	1288	1288
Weights									
Heat exchanger	kg	108	108	108	108	108	108	108	108
Burning chamber module	kg	273	273	273	273	273	273	273	273
Fill chamber module	kg	224	224	224	224	221	221	221	221
Total weight (without/with pellet module)	kg	722	722	722	722	719	719	719	719

CF1.5 CF2 18.01.2021	Unit	CF1.5 18	CF1.5 28	CF1.5 32	CF1.5 38	CF2 18	CF2 28	CF2 32	CF2 38
Emissions according to test report		TÜV Austria	TÜV Austria	TÜV Austria	TÜV Austria	TÜV Austria	TÜV Austria	TÜV Austria	TÜV Austria
Test report no.	—	15-UW/Wels-EX-132/3	15-UW/Wels-EX-132/2	15-UW/Wels-EX-132/8	15-UW/Wels-EX-132/6	15-UW/Wels-EX-132/3	15-UW/Wels-EX-132/2	15-UW/Wels-EX-132/8	15-UW/Wels-EX-132/6
O ₂ content rated power	Vol.-%	6,2	6,3	5,7	5,6	6,2	6,3	5,7	5,6
O ₂ content partial load	Vol.-%	-	6,2	6,2	6,2	-	6,2	6,2	6,2
CO ₂ content rated power	Vol.-%	13,8	13,9	14,7	14,8	13,8	13,9	14,7	14,8
CO ₂ content partial load	Vol.-%	-	14,0	14,0	14,0	-	14,0	14,0	14,0
Noise emissions (EN 15036-1)									
Normal operating noise at rated power	dB(A)	< 70	< 70	< 70	< 70	< 70	< 70	< 70	< 70
Ref. 10 % O₂ dry (EN303-5)									
CO at rated power	mg/Nm ³	57	64	53	32	57	64	53	32
CO at partial load	mg/Nm ³	-	81	81	81	-	81	81	81
NO _x at rated power	mg/Nm ³	153	169	158	169	153	169	158	169
NO _x at partial load	mg/Nm ³	-	115	115	115	-	115	115	115
OGC at rated power	mg/Nm ³	7	7	4	5	7	7	4	5
OGC at partial load	mg/Nm ³	-	12	12	12	-	12	12	12
Dust at rated power	mg/Nm ³	13	21	20	21	13	21	20	21
Dust at partial load	mg/Nm ³	-	10	10	10	-	10	10	10
Ref. 11 % O₂ dry									
CO at rated power	mg/Nm ³	52,0	58,0	48,0	29,0	52,0	58,0	48,0	29,0
CO at partial load	mg/Nm ³	-	74,0	74,0	74,0	-	74,0	74,0	74,0
NO _x at rated power	mg/Nm ³	139,0	154,0	143,0	153,0	139,0	154,0	143,0	153,0
NO _x at partial load	mg/Nm ³	-	104,0	104,0	104,0	-	104,0	104,0	104,0
OGC at rated power	mg/Nm ³	7,0	7,0	4,0	5,0	7,0	7,0	4,0	5,0
OGC at partial load	mg/Nm ³	-	11,0	11,0	11,0	-	11,0	11,0	11,0
Dust at rated power	mg/Nm ³	12,0	19,0	18,0/	19,0	12,0	19,0	18,0	19,0
Dust at partial load	mg/Nm ³	-	10,0	10,0	10,0	-	10,0	10,0	10,0
Ref. 13 % O₂ dry (FJ-BLT)									
CO at rated power	mg/Nm ³	42,0	47,0	39,0	23,0	42,0	47,0	39,0	23,0
CO at partial load	mg/Nm ³	-	59,0	59,0	59,0	-	59,0	59,0	59,0
NO _x at rated power	mg/Nm ³	111,0	123,0	115,0	123,0	111,0	123,0	115,0	123,0
NO _x at partial load	mg/Nm ³	-	84,0	84,0	84,0	-	84,0	84,0	84,0
OGC at rated power	mg/Nm ³	5,0	5,0	3,0	4,0	5,0	5,0	3,0	4,0
OGC at partial load	mg/Nm ³	-	8,0	8,0	8,0	-	8,0	8,0	8,0
Dust at rated power	mg/Nm ³	10,0	15,0	15,0	15,0	10,0	15,0	15,0	15,0
Dust at partial load	mg/Nm ³	-	8,0	8,0	8,0	-	8,0	8,0	8,0
In accordance with § 15a-BVG Austria									
CO at rated power	mg/MJ	28,0	32,0	26,0	16,0	28,0	32,0	26,0	16,0
CO at partial load	mg/MJ	-	40,0	40,0	40,0	-	40,0	40,0	40,0
NO _x at rated power	mg/MJ	76,0	84,0	78,0	84,0	76,0	84,0	78,0	84,0
NO _x at partial load	mg/MJ	-	57,0	57,0	57,0	-	57,0	57,0	57,0
OGC at rated power	mg/MJ	4,0	4,0	2,0	4,0	4,0	4,0	2,0	4,0
OGC at partial load	mg/MJ	-	6,0	6,0	6,0	-	6,0	6,0	6,0
Dust at rated power	mg/MJ	7,0	10,0	10,0	11,0	7,0	10,0	10,0	11,0
Dust at partial load	mg/MJ	-	5,0	5,0	5,0	-	5,0	5,0	5,0

mg/Nm³ ... Milligram per standard cubic meter (1 Nm³ under

1.013 hectopascal at 0 °C)

FJ-BLT ... Francisco Josephinum Wieselburg – Biomass Logistic
Technology

*** ... Drawing inspection

** ... The water-side resistance is specified and determined in each case
on the boiler interface (flange RF/FF)

Keyword index

A

Air gap, 45
Air vent, 8
Align, 45
Ash trough, 48
Axle locking ring, 27

B

Base plate, 24
Basic structure, 20, 30
Boiler forward flow temperature, 42
Bolt, 27

C

Cable duct, 47
Capillary tube, 42
CEE plug, 10
Ceramic fibre cord, 26
Cold water pressure, 16
Combustion chamber lining, 22
Comfort Online, 47
Connecting pipe, 31
Contact pressure, 28
Control box, 39
Control unit, 47
Crane, 21

D

directive
 fire protection, 7
Distance, 30
Door fastener, 26
Door handle, 26
Door handles, 27
Door holder, 45
Door leaf, 27
Door magnet, 44
Door width, 20

E

Emptying, 18
Ethernet cable, 47
Exhaust gas pipe, 18

F

Fastening bracket, 37, 38
Filling, 18
Fire extinguisher, 8
fire protection
 customer-provided, 8
Floor, 8
Floor plate, 45
Floor trough, 48
Forward flow, 18
Forward flow temperature, 42
Frost protection, 8

G

guarantee requirement, 7

H

Heat exchanger, 23, 34
Hinge, 26
Hinge bolt, 45
Hoisting lug, 21, 30
Hot surfaces, 41, 42

I

Ignition fan, 34
Ignition pipe, 34
Immersion sleeve, 42
Immersion sleeves, 41
incorrect
 stickers, 14, 49
Induced draught, 41
Induced draught fan, 33
Inlet, thermal discharge safety valve, 16
Inspection glass slider, 26
installation guidelines, 7
Installation sequence, 30
Installations, 23
Insulation, 36, 39
Internal distance, 24

K

KWB Logo, 14, 49

L

Lambda sensor, 40
Lifting aid, 23
Lifting truck, 21
Limit switch, 48

M

Magnet catch, 44
Maintenance, 30
Maintenance area, 23
Maintenance cover, 34, 38, 46
missing
 stickers, 14, 49

O

Outlet, thermal discharge safety valve, 16

P

Portable fire extinguisher, 8
Power supply, 18
predetermined breaking point, 38

R

Reconfigure the doors, 26
Return flow, 18
Return flow boost, 18

S

Safety release button, 32
Safety temperature limiter, 42
Separate the modules, 22
Servomotor, 32
Set screw, 30
Side casing, 46
Spirit level, 30
Sticker, 16, 17
Sticker sheet, 14, 49
stickers, 14, 49
Stop, 28
Suction channel, 22

T

Tab, 45
Torque support, 32
TRVB H118, 7
Turbulators, 0

U

Unobstructed door width, 20

 
W

warranty requirement, 7









KWB – Kraft und Wärme aus Biomasse GmbH
Industriestraße 235
A-8321 St. Margarethen an der Raab
+43 3115 6116-0
office@kwb.at | www.kwb.at



* 2 1 - 2 0 0 1 2 8 8 *

Original manual | 2021-02 | Index 2 | EN